

(12) **United States Patent**
Wood et al.

(10) **Patent No.:** **US 9,049,911 B1**
(45) **Date of Patent:** **Jun. 9, 2015**

(54) **ELECTRONIC DEVICE COVER**

(56) **References Cited**

(71) Applicant: **Amazon Technologies, Inc.**, Reno, NV (US)

U.S. PATENT DOCUMENTS

(72) Inventors: **Jeffrey Robinson Wood**, Mountain View, CA (US); **Monica Liane Mecchella**, San Francisco, CA (US); **Peter John Thomas Johnson**, Seattle, WA (US); **Ryan C. Tong**, Palo Alto, CA (US); **Keeley Justin Boehmer**, San Francisco, CA (US); **Sarah Lynn Kirchoff**, Campbell, CA (US); **Paul Gregory Van Gasse**, Mountain View, CA (US)

5,377,794	A	1/1995	Book
5,607,054	A	3/1997	Hollingsworth
7,545,634	B2	6/2009	Simonian et al.
8,143,982	B1 *	3/2012	Lauder et al. 206/320
D672,781	S	12/2012	Lu
8,328,008	B2 *	12/2012	Diebel et al. 206/45.24
8,344,836	B2 *	1/2013	Lauder et al. 206/320
8,393,464	B2	3/2013	Yang et al.
8,424,829	B2	4/2013	Lu et al.
D687,438	S	8/2013	Lu
D690,702	S	10/2013	Chung
D691,145	S	10/2013	Nam-Su
D693,823	S	11/2013	Chen et al.
8,640,864	B2 *	2/2014	Chen et al. 206/45.2
8,763,795	B1 *	7/2014	Oten et al. 206/45.23
2004/0240164	A1	12/2004	Lee
2006/0285283	A1	12/2006	Simonian et al.

(73) Assignee: **Amazon Technologies, Inc.**, Reno, NV (US)

(*) Notice: Subject to any disclaimer, the term of this patent is extended or adjusted under 35 U.S.C. 154(b) by 0 days.

(Continued)

OTHER PUBLICATIONS

Office action for U.S. Appl. No. 13/220,549, mailed on Jul. 24, 2013, Mecchella, "Transformable Carrying Case," 10 pages.

(Continued)

(21) Appl. No.: **14/034,417**

(22) Filed: **Sep. 23, 2013**

Primary Examiner — Bryon Gehman

(74) Attorney, Agent, or Firm — Lee & Hayes, PLLC

(51) **Int. Cl.**

A45C 11/00 (2006.01)

A45C 13/02 (2006.01)

G06F 1/16 (2006.01)

(52) **U.S. Cl.**

CPC **A45C 11/00** (2013.01); **A45C 2013/025** (2013.01); **G06F 1/1656** (2013.01)

(58) **Field of Classification Search**

CPC .. **A45C 11/00**; **A45C 2013/025**; **A45F 5/112**; **B65D 5/522**; **B65D 5/5213**; **B65D 5/5226**;

B65D 5/5233; **B65D 73/0085**; **B65D 2207/00**

USPC 206/45.2–45.26, 216, 320


See application file for complete search history.

(57)

ABSTRACT

A cover for an electronic device includes back cover, such as a tray, to receive the electronic device. The cover may also include a foldable flap that is foldable into a stand to support an electronic device held by the cover at one or more viewing angles oblique to a surface on which the cover is placed. The back cover and/or the foldable flap may include one or more activation mechanisms that, when moved relative to the electronic device, activate one or more functions of the electronic device (e.g., camera functions, display of information, etc.).

31 Claims, 15 Drawing Sheets

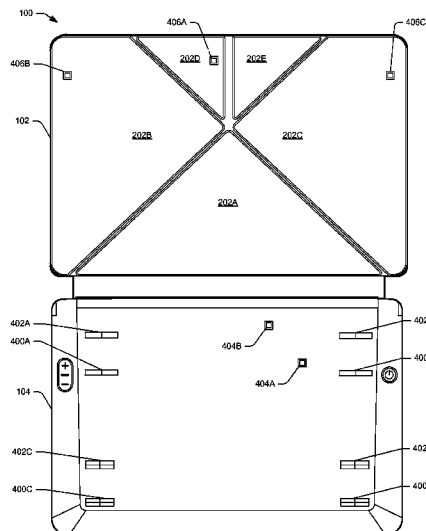

(56)

References Cited

U.S. PATENT DOCUMENTS

2010/0089779	A1	4/2010	Bowers
2010/0294683	A1	11/2010	Mish et al.
2012/0006951	A1	1/2012	Lin
2012/0181195	A1	7/2012	Lu et al.
2012/0305413	A1	12/2012	Chung
2013/0020214	A1	1/2013	Chiou
2013/0020216	A1	1/2013	Chiou
2013/0043148	A1	2/2013	Chen et al.

2013/0048517	A1 *	2/2013	Mecchella	206/216
2013/0134061	A1	5/2013	Wu et al.	
2013/0146482	A1	6/2013	Huang	

OTHER PUBLICATIONS

Office Action for U.S. Appl. No. 13/220,549, mailed on Mar. 21, 2014, Monica Liane Mecchella, "Transformable Carrying Case," 10 pages.

Office action for U.S. Appl. No. 13/220,549, mailed on Nov. 29, 2013, Mecchella, "Transformable Carrying Case," 12 pages.

* cited by examiner

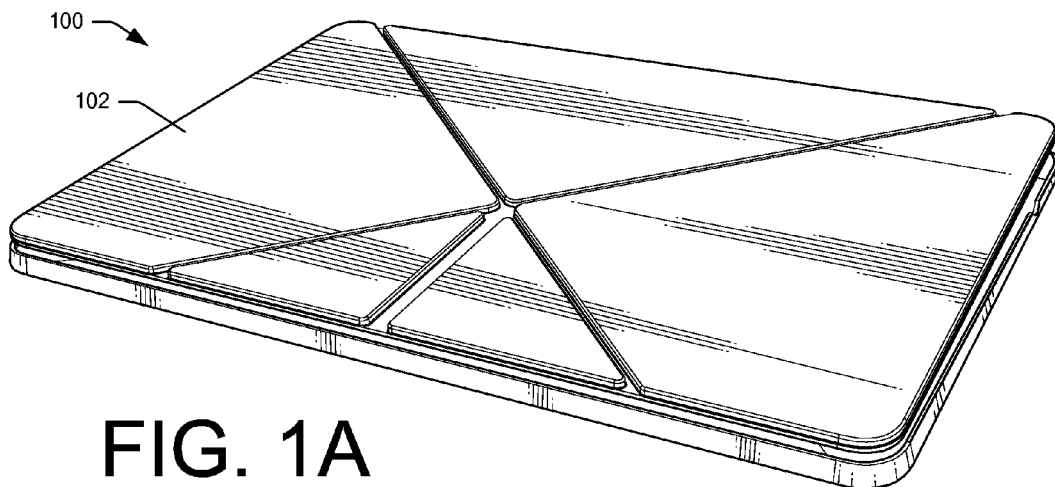


FIG. 1A

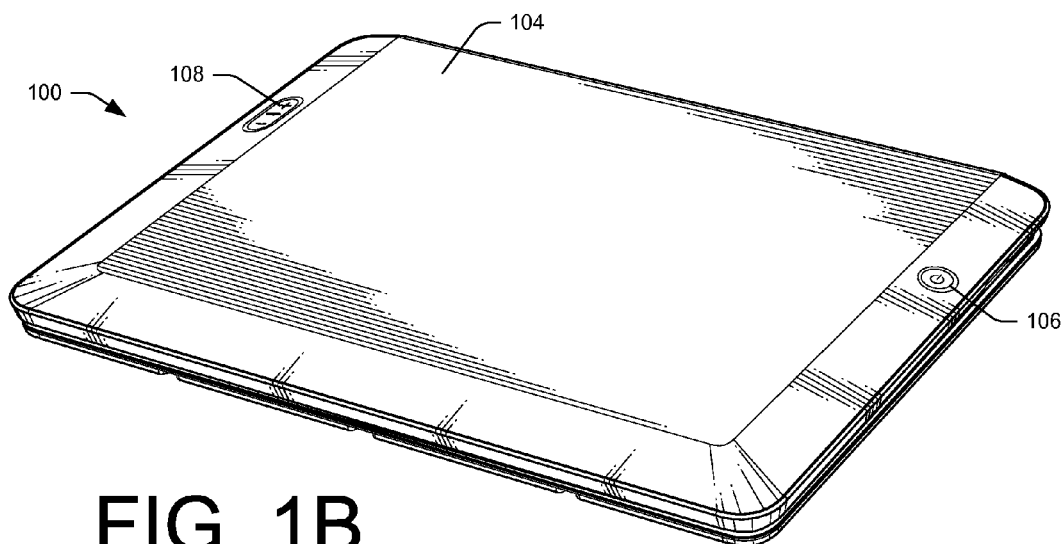
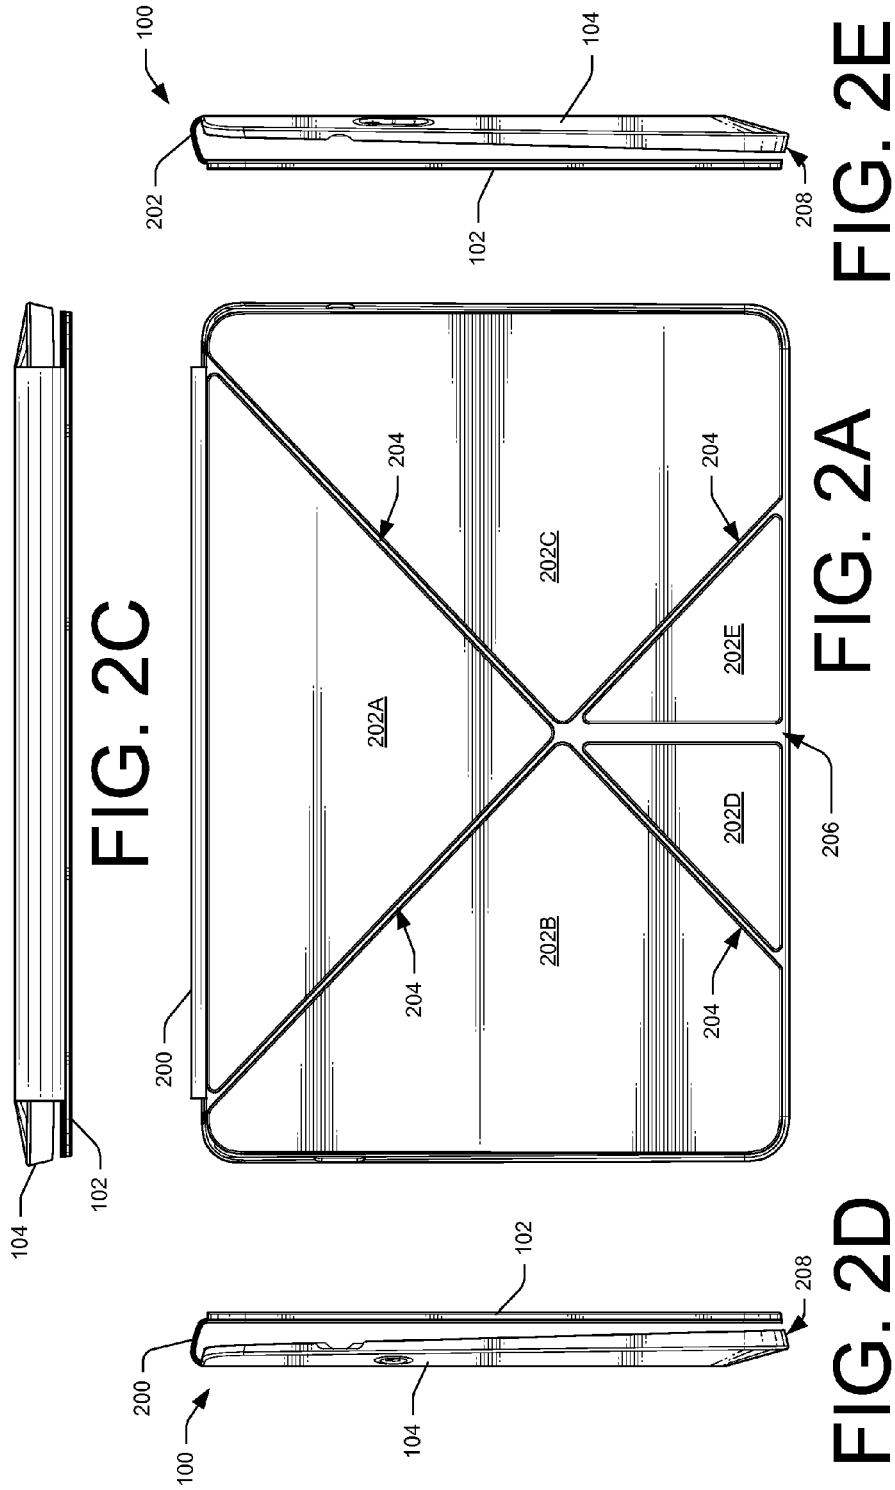


FIG. 1B



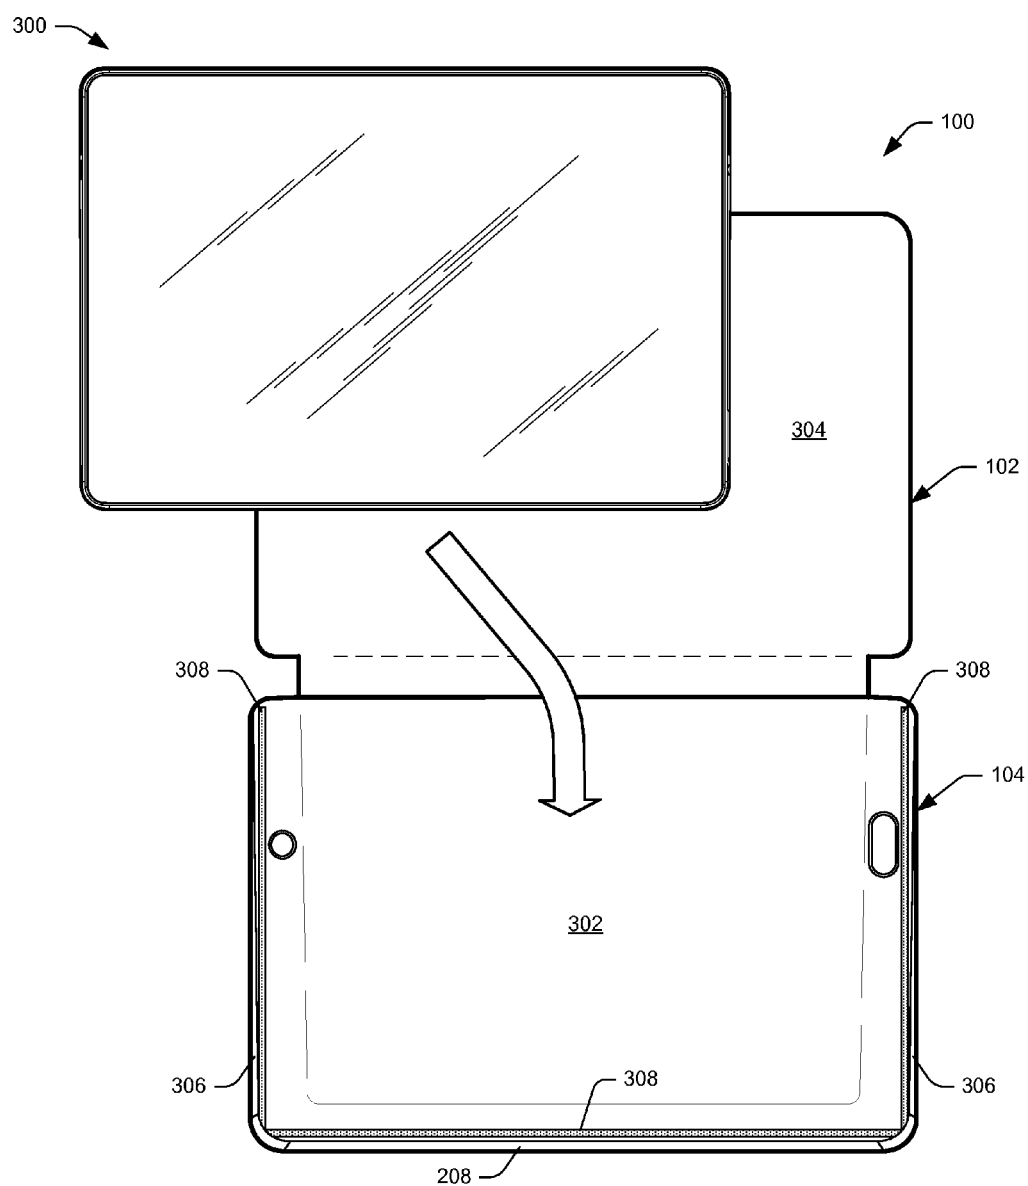


FIG. 3

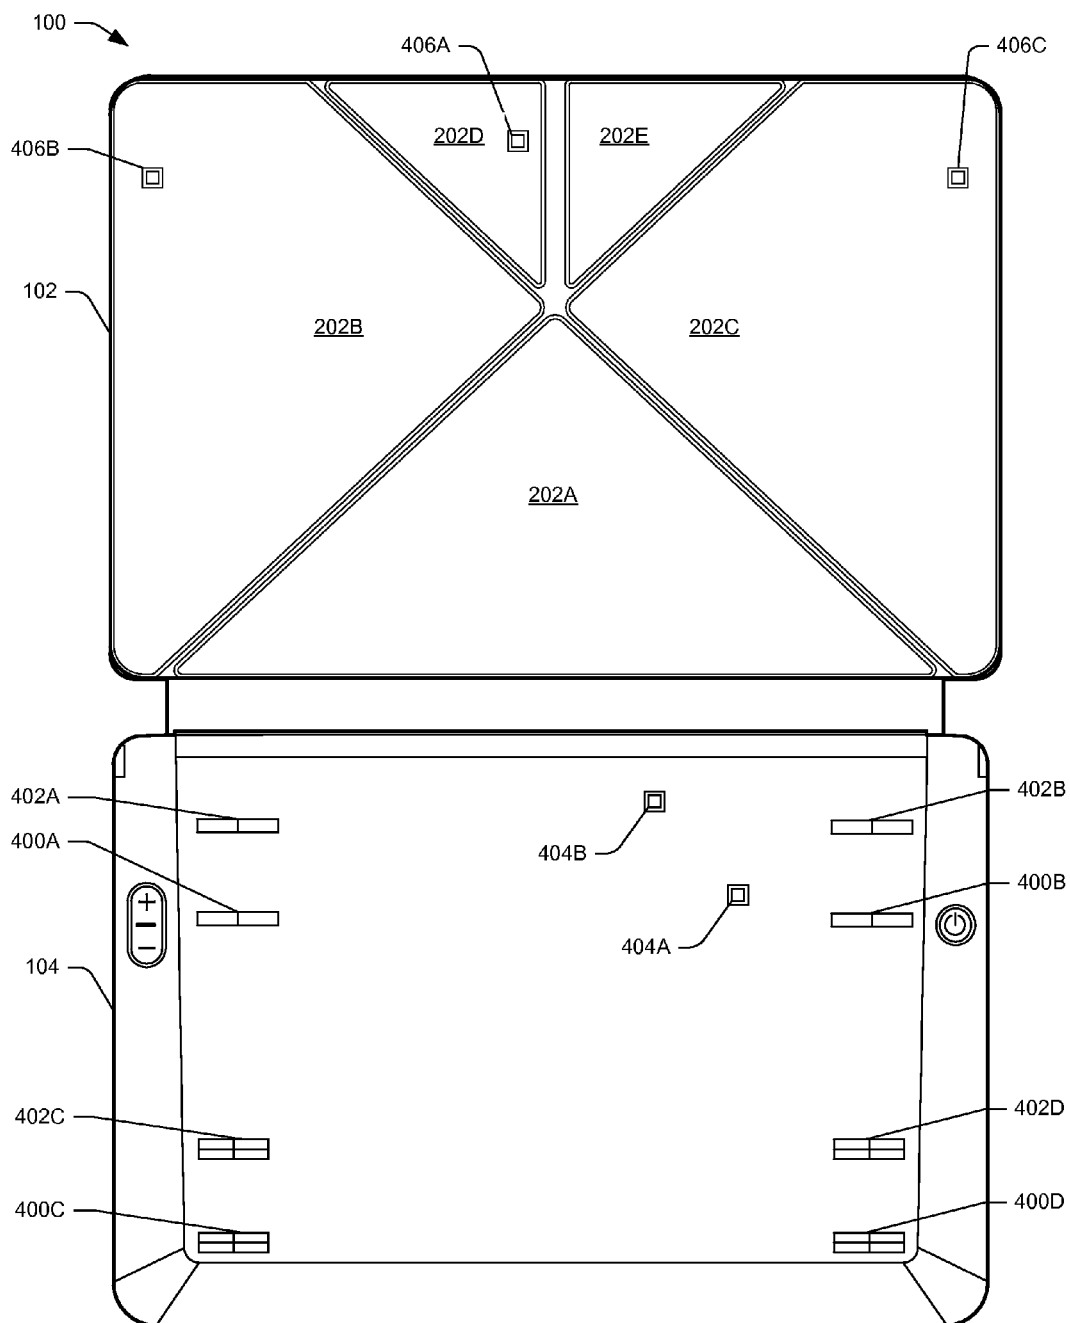
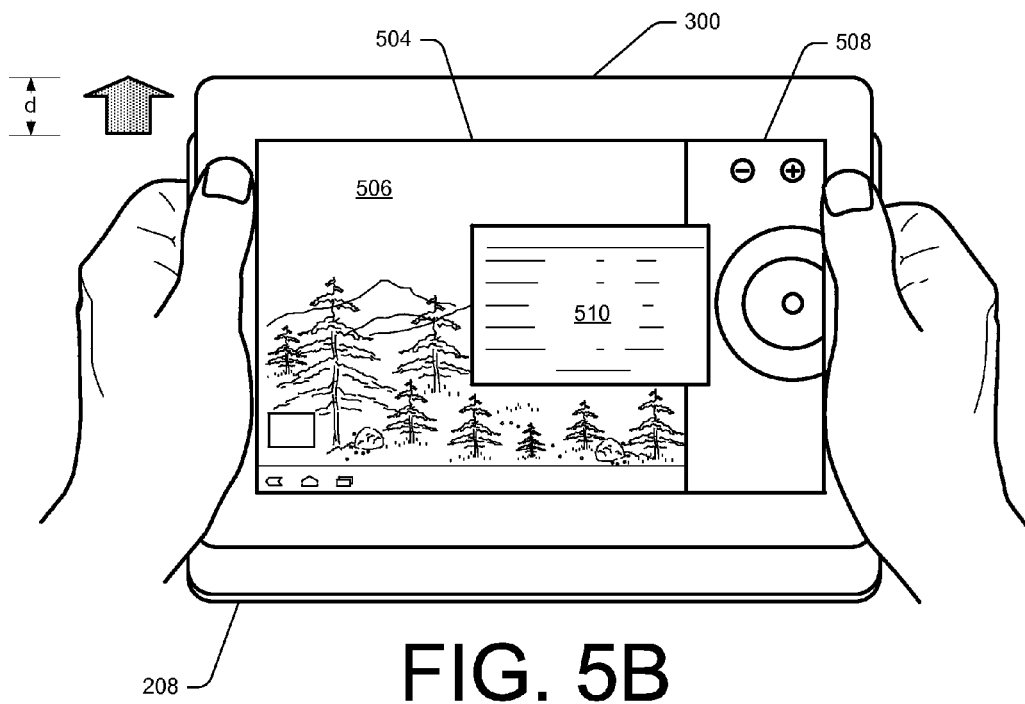
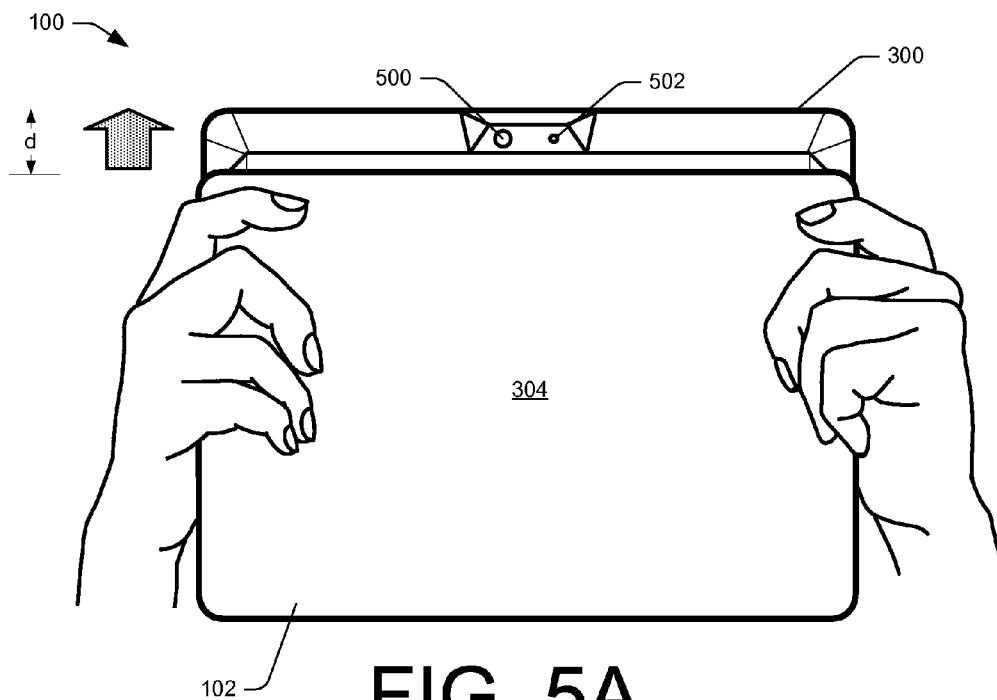


FIG. 4



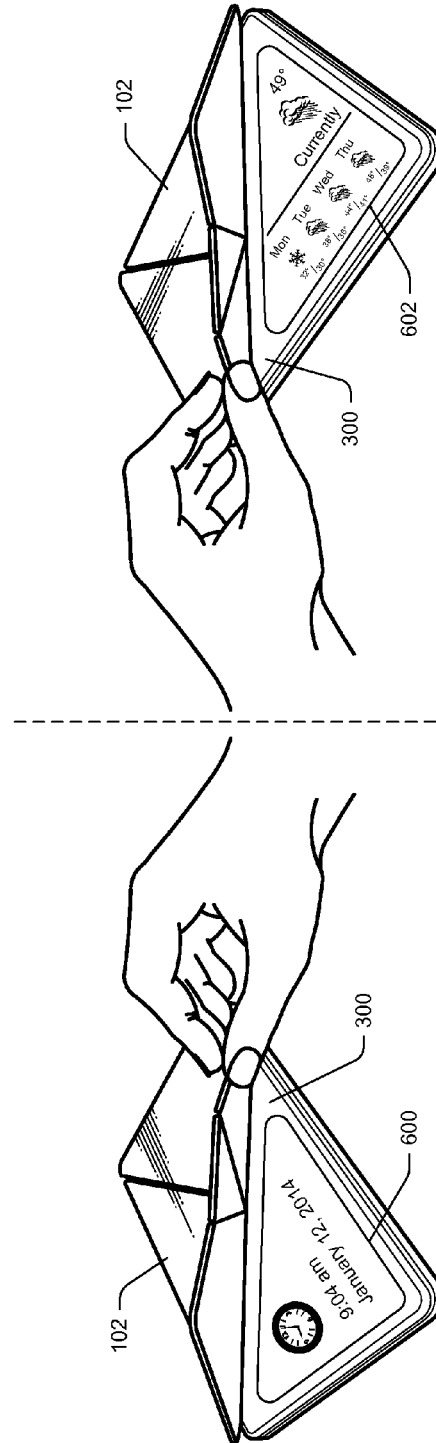
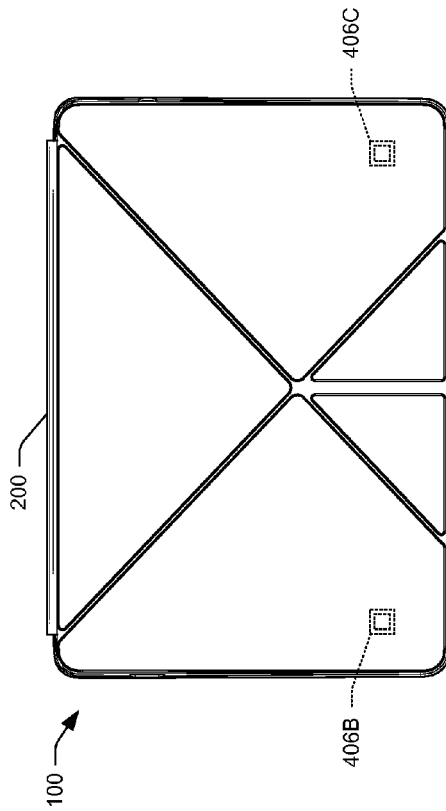


FIG. 6

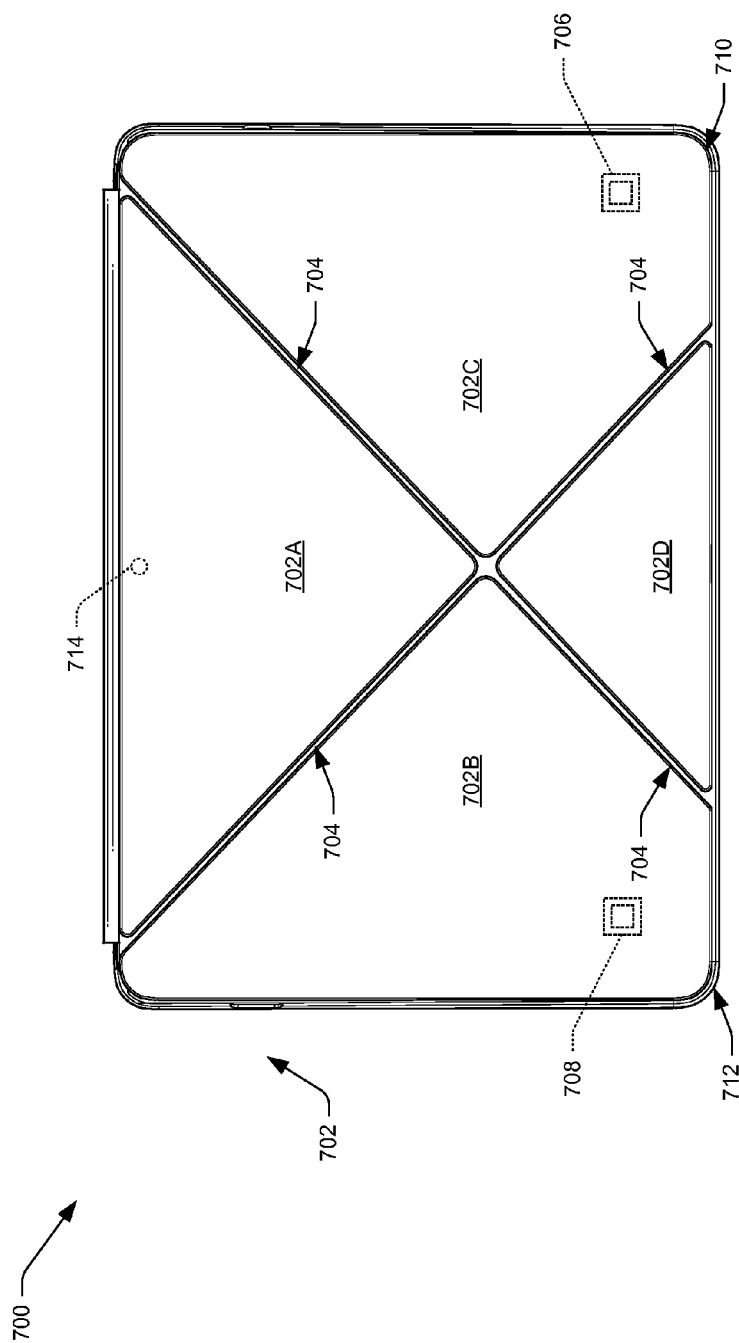
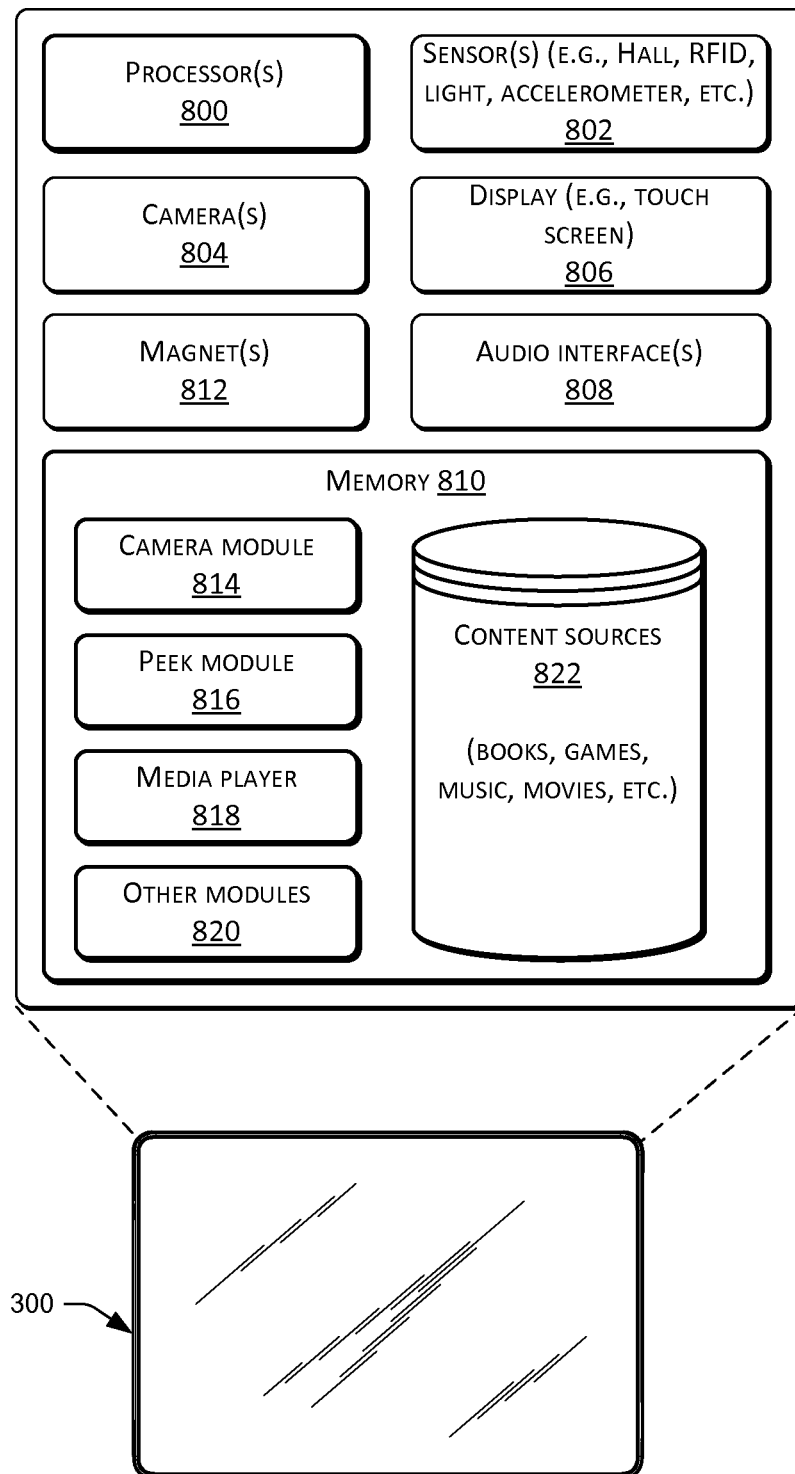


FIG. 7

**FIG. 8**

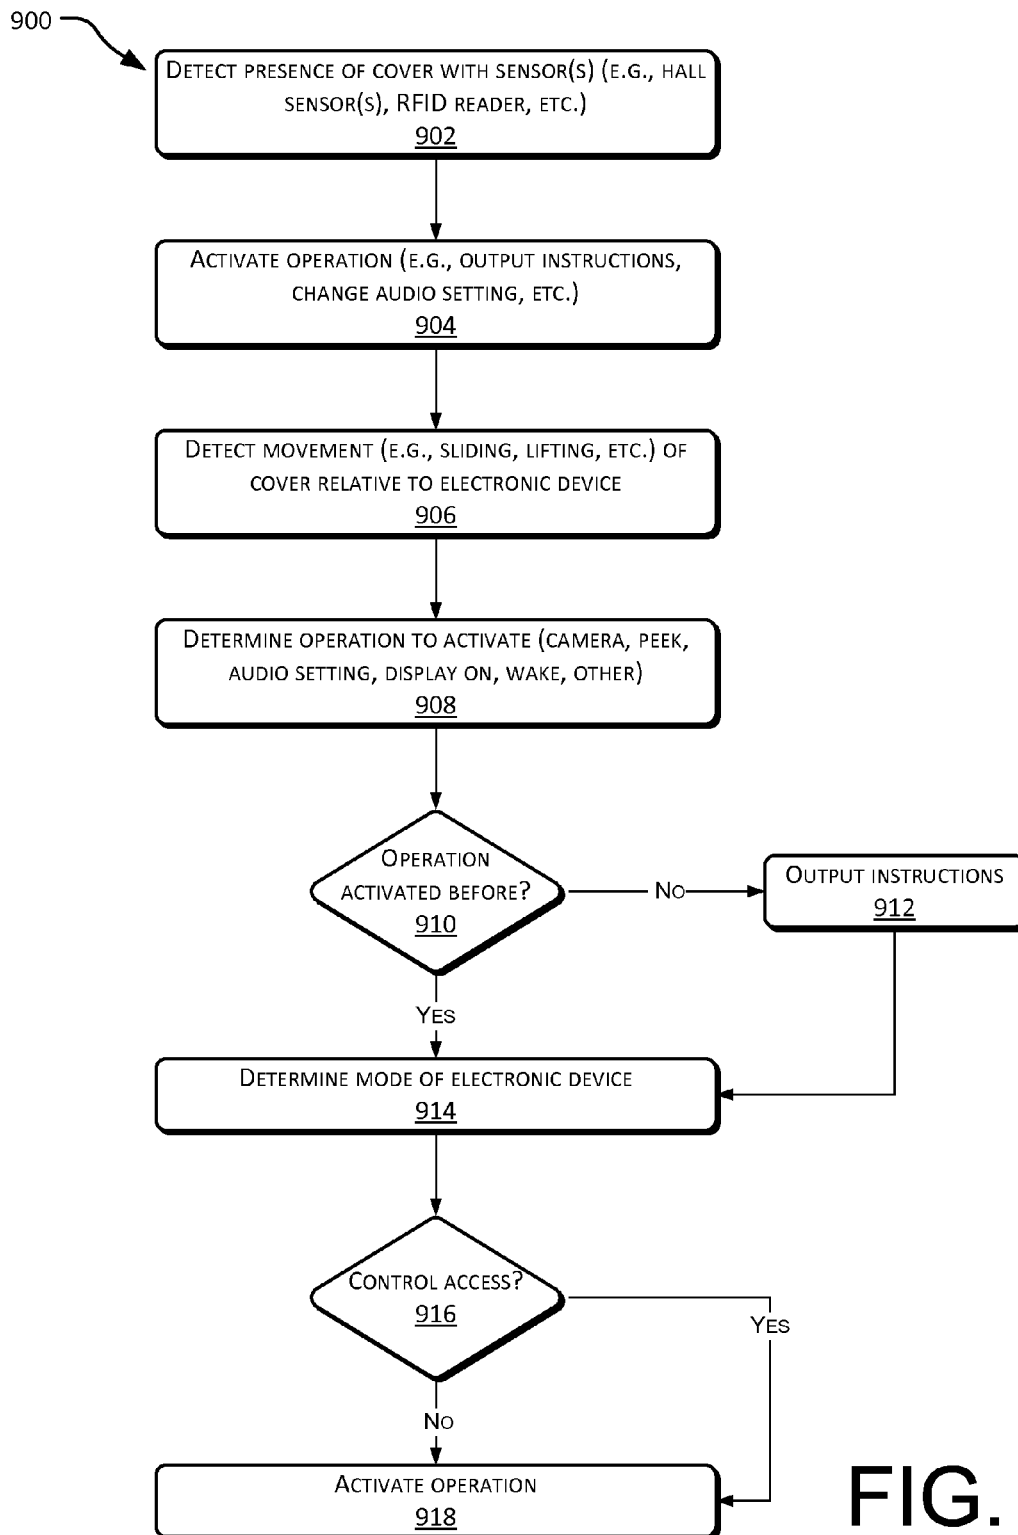


FIG. 9

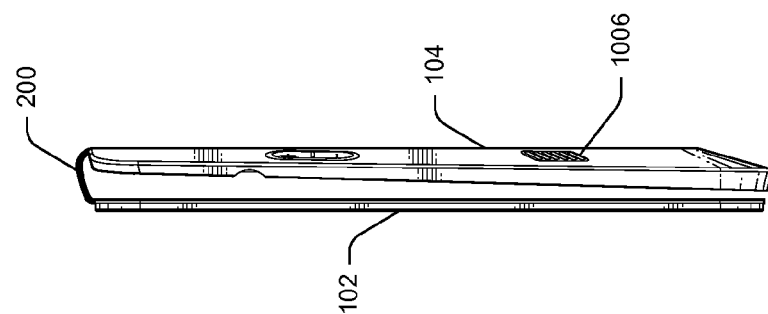


FIG. 10A

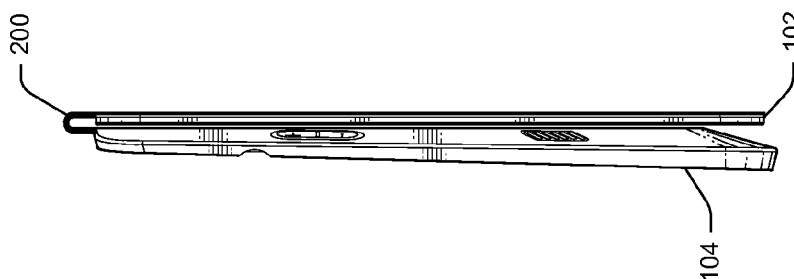


FIG. 10B

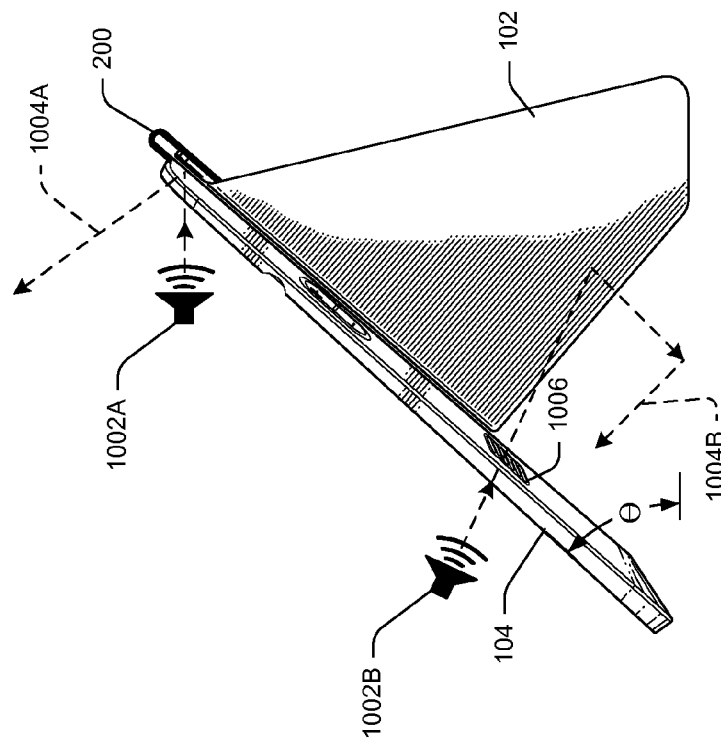


FIG. 10C

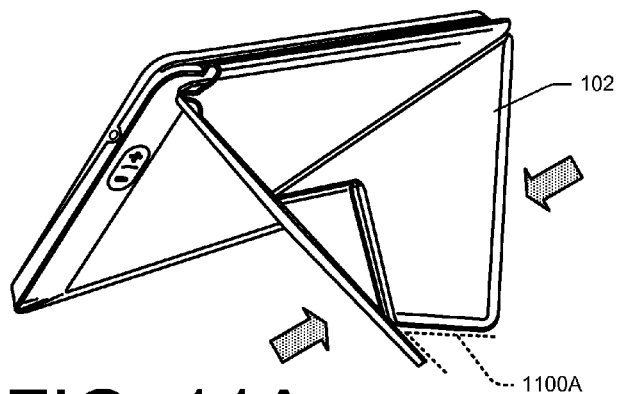


FIG. 11A

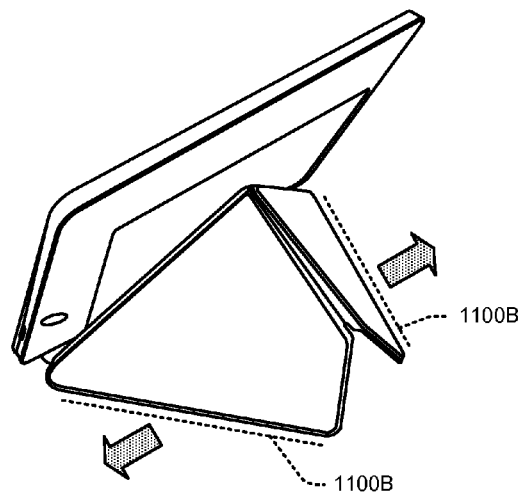


FIG. 11B

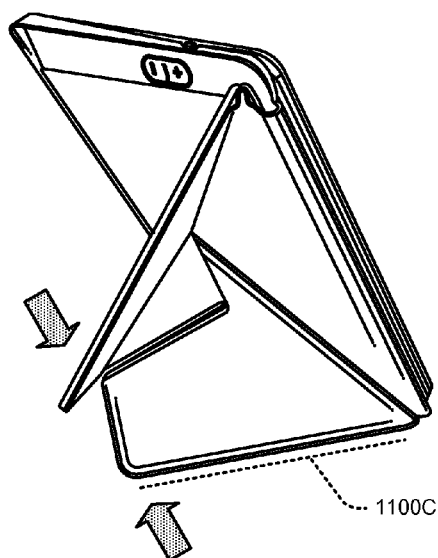


FIG. 11C

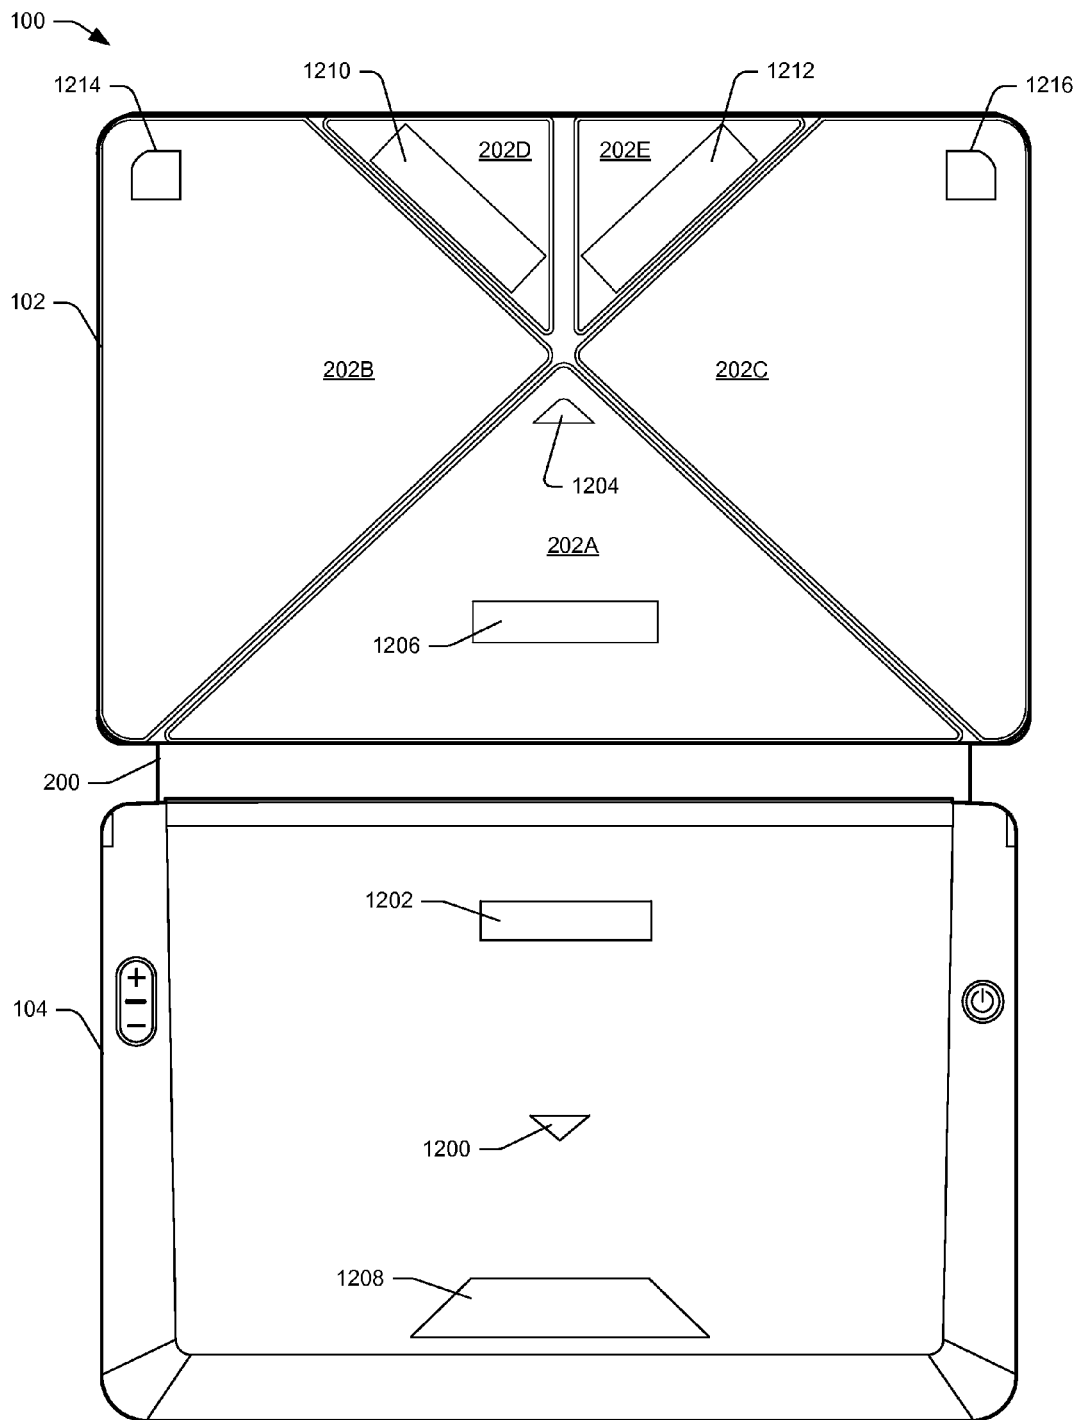


FIG. 12

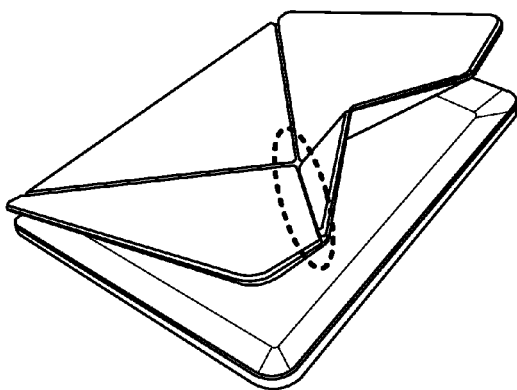


FIG. 13A

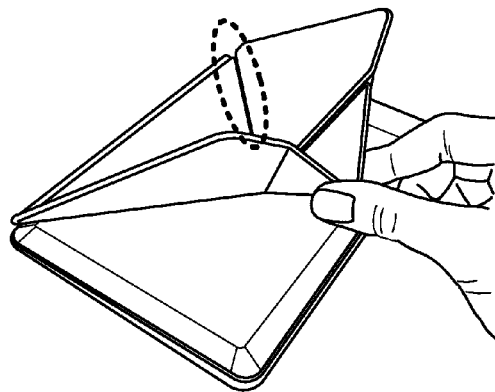


FIG. 13B

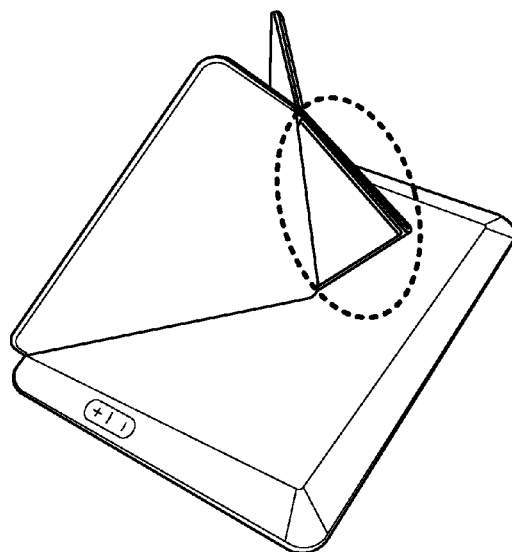


FIG. 13C

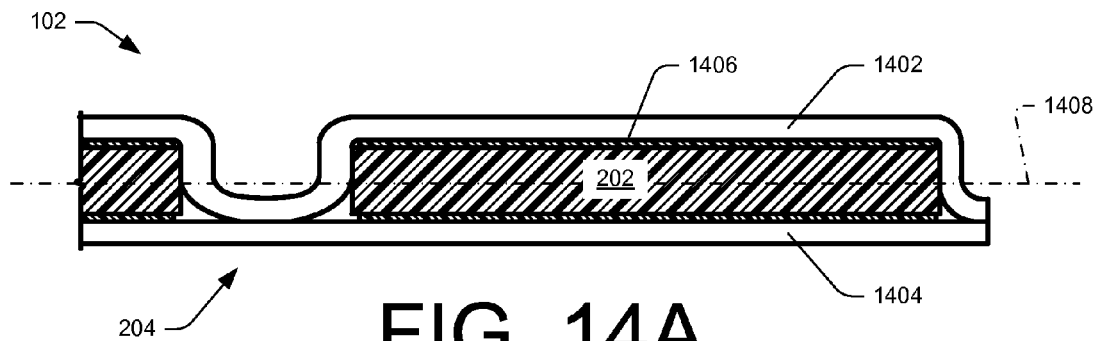


FIG. 14A

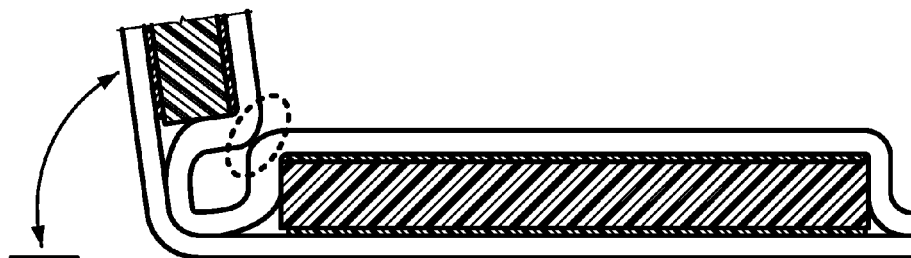


FIG. 14B

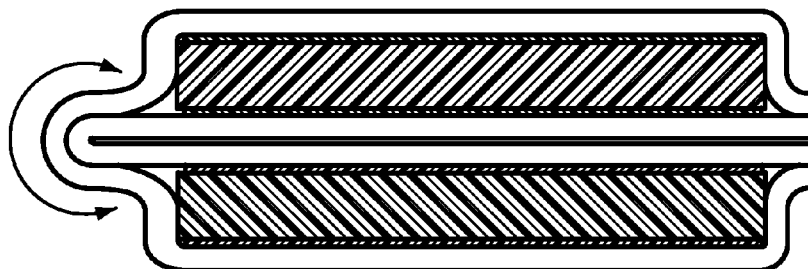


FIG. 14C

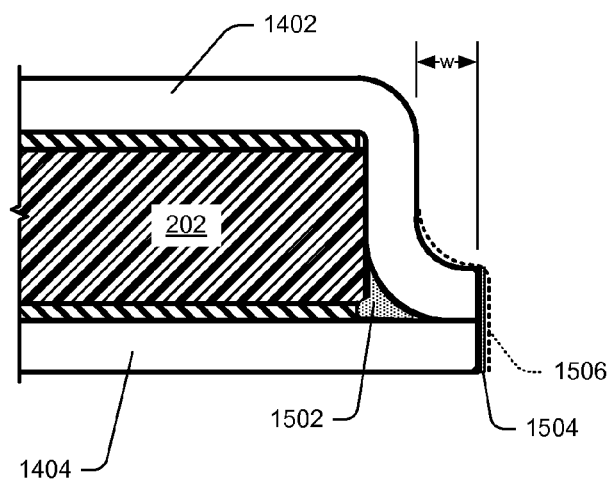


FIG. 15

ELECTRONIC DEVICE COVER**BACKGROUND**

Covers provide a convenient way of transporting and protecting various objects, such as electronic devices, books, and the like. A wide variety of covers exist for holding a variety of different objects.

With some conventional covers, a user places an object in the cover during non-use of the object, and removes the object from the cover and sets the cover aside during use of the object. For example, a user may store a tablet computer in a cover during non-use. When the user desires to use the tablet computer, the user may remove the tablet computer from the carrying case and either hold it or set it on a desk or other work surface.

With other conventional covers, the cover may protect the object during non-use and may remain attached to the object during use. For example, tablet computer covers protect the tablet computer during non-use. During use, the cover may simply fold back to allow the user to use the tablet computer without completely removing the cover.

However, neither of these types of conventional covers is designed to aid in the use of the object. Rather, these conventional covers must be removed during use else they get in the way of convenient use of the object.

BRIEF DESCRIPTION OF THE DRAWINGS

The detailed description references the accompanying figures. In the figures, the left-most digit(s) of a reference number identifies the figure in which the reference number first appears. The use of the same reference numbers in different figures indicates similar or identical items.

FIG. 1A and FIG. 1B are top and bottom perspective views, respectively, of an example cover for an electronic device in a closed position.

FIGS. 2A-2E are top, front, back, left-side, and right-side views, respectively, of the example cover of FIG. 1A and FIG. 1B.

FIG. 3 depicts the example cover of FIG. 1A and FIG. 1B in a flat position, with an example electronic device being inserted therein.

FIG. 4 is schematic view of the example cover of FIG. 1A and FIG. 1B, showing example locations of elements that may be used to retain an electronic device and/or activate one or more functions of the electronic device.

FIG. 5A and FIG. 5B are schematic back and front views, respectively, showing an example use case in which an electronic device activates a camera application in response to sliding the electronic device relative to a cover to expose a camera of the electronic device.

FIG. 6 is a schematic diagram showing another example use case in which lifting ("peeking" under) various portions of a flap of a cover activates different operations to be performed by the electronic device.

FIG. 7 is a top view of another example cover that may be used to implement variations of peek functionality.

FIG. 8 is a block diagram of an example electronic device usable to implement one or more functions (e.g., launching a camera application, displaying information, turning on a display, waking the electronic device, etc.) responsive to movement of at least a portion of a cover relative to the electronic device.

FIG. 9 is a flowchart illustrating an example method of activating an operation of an electronic device responsive to motion of the electronic device relative to a cover.

FIG. 10A, FIG. 10B, and FIG. 10C illustrate a closed position, an open position, and a stand position, respectively, into which the example cover of FIG. 1A and FIG. 1B is movable.

FIG. 11A, FIG. 11B, and FIG. 11C illustrate three different orientations in which the example cover of FIG. 1A and FIG. 1B is configured to support an electronic device when the cover is in the stand position.

FIG. 12 is schematic view of the example cover of FIG. 1A and FIG. 1B, showing example locations of elements that may be used to hold the cover in one or more positions.

FIGS. 13A-13C illustrate features of the example cover of FIG. 1A and FIG. 1B which prevent the cover from being folded incorrectly.

FIGS. 14A-14C are partial cross-sectional views of an example foldable flap of a cover for an electronic device having a directional hinge that limits folding in one direction (see FIG. 14B) while allowing folding in an opposite direction (see FIG. 14C).

FIG. 15 is a partial cross-sectional view of an example flap of a cover for an electronic device having a low-profile edge seam.

DETAILED DESCRIPTION

As discussed above, existing covers provide a convenient way to protect and transport objects, such as tablet computers and other electronic devices. However, existing covers have limited functionality and do not enhance the use of the electronic devices.

This disclosure describes example covers for electronic devices that not only protect the electronic device, such as during transport of the electronic device, but also enhance the use of the electronic device. As used herein, the term "cover" includes carrying cases, protective sleeves, and other holders for electronic devices. The disclosure also describes electronic devices usable with the example covers. The disclosure also describes various methods implemented using covers and/or electronic devices such as those described herein.

In one aspect, covers according to some embodiments of this disclosure may be configured to activate one or more operations of an electronic device in response to relative movement of the electronic device and the cover. For example, relative movement between the electronic device and the cover may expose a camera of the electronic device. The movement may additionally or alternatively activate an application associated with the camera of the electronic device. As another example, relative movement between the electronic device and the cover may expose one or more speakers of the electronic device and/or may connect the electronic device with one or more external speakers. The movement may additionally or alternatively change an audio setting of the electronic device (e.g., adjust a volume of the electronic device, activate an audio signal processing algorithm, etc.). As another example, lifting a portion of a flap that covers a display of the electronic device may expose a portion of the display and may cause the electronic device to perform an operation (e.g., display information on the exposed portion of the display). Lifting another portion of the flap may expose another portion of the display and may cause the electronic device to perform another operation (e.g., display different information on the exposed other portion of the display). Lifting both portions of the flap at the same time may cause the electronic device to perform yet another operation (e.g., turn on the display of the device, wake the device, etc.).

In another aspect, an example cover may include a front cover and a back cover. The front cover may include a fold-

able flap. The foldable flap may be movable between multiple positions, including a closed position (in which the foldable flap is substantially planar and covers an inner surface of the back cover), an open position (in which the foldable flap is substantially planar and lies substantially parallel and adjacent to an outer surface of the back cover), and a stand position (in which the foldable flap folds to form a stand to support the back cover at an angle relative to a support surface on which the cover is placed). In some instances, the stand position may be configured to support an electronic device in multiple different orientations relative to the support surface. Other example covers may omit the back cover entirely. In such examples, the front cover may couple directly to the electronic device (e.g., to cover a display of the electronic device).

Covers according to this disclosure may be designed for use with a variety of objects, such as, for example, electronic book reader devices, tablet computers, mobile devices, portable gaming devices, electronic picture frames, display screens, or other electronic devices.

Additional details are described below with reference to several example embodiments.

Example Cover for Electronic Device

FIG. 1A, FIG. 1B, and FIGS. 2A-2E illustrate an example cover **100** for an electronic device in a closed position. FIG. 1A is a perspective view of the cover **100** with a front cover **102** face up. The front cover **102** comprises a substantially planar, foldable flap. FIG. 1B is a perspective view of the cover **100** with a back cover **104** shown face up. The back cover **104** comprises a tub or tray having a receptacle for receiving and retaining an electronic device. The cover **100** also includes one or more controls, such as a power button **106** and volume control **108**, which may be used to actuate corresponding controls of an electronic device housed in the cover **100**.

FIGS. 2A-2E illustrate top, front, back, left-side, and right-side views, respectively, of the cover **100**. As best shown in FIG. 2D and FIG. 2E, the front cover **102** is coupled to the back cover **104** along a longitudinal edge of the back cover **104** by a flexible hinge **202** that allows the front cover **102** to fold relative to the back cover **104**. In the illustrated example, the flexible hinge **202** comprises an extension of one or more sheets of material from which the front cover **102** is constructed. However, in other embodiments, the flexible hinge **200** may be made of a separate piece of material than the front cover **102**.

As shown in FIG. 2A, the front cover **102** includes multiple substantially planar panels **202A**, **202B**, **202C**, **202D**, and **202E** (collectively “panels **202**”) coupled together by flap hinges **204** and **206**. In one example, the multiple substantially planar panels **202** are coupled together by a flexible material that at least partially surrounds or covers the panels **202**. For instance, the panels **202** may be interposed or sandwiched between flexible sheets of material. Such an example is described in detail below with reference to FIGS. 14A-14C and FIG. 15. By way of example and not limitation, the flexible material may comprise natural or synthetic fabric or sheets of material, foam, leather, faux leather, plastic, rubber, combinations of these, or other flexible materials. In some examples, the panels **202** may comprise separate individual pieces of material bonded, adhered, stitched, co-molded, ultrasonically welded, or otherwise affixed to the flexible material. In that case, the flexible material serves the dual purposes of holding the panels **202** in position relative to one another and of allowing the panels **202** to fold relative to one another along flap hinges **204** and **206**. Additionally or alter-

natively, the panels **202** may be joined directly to each other by stitching, sonic welding, adhesive, or the like.

In another example, the panels **202** may be formed integrally and the flap hinges **204** and **206** may represent score lines, thinned sections of material, perforations, weakened sections, living hinges, or other features designed to allow the panels **202** to fold relative to one another.

At least some of the flap hinges (flap hinges **204** in this example) comprise directional hinges that allow adjacent panels to fold relative to each other in a first direction, but limit the adjacent panels from folding relative to each other in a second direction opposite the first direction. Additional details of the function and construction of directional hinges are given below with reference to FIGS. 13A-13C and FIGS. 14A-14C. Other hinges (hinge **206** in this example) comprise non-directional or free hinges that are free to fold in either direction around a fold axis.

In the example of FIG. 2A, the front cover **102** is shown to include five panels **202** which are arranged such that a size and shape of the perimeter of the front cover **102** substantially matches a size and shape of the perimeter of the back cover **104**. However, in other embodiments, the back cover **104** may comprise more or fewer panels, in which case the front cover **102** may be configured to bend at different locations (i.e., different fold lines or hinges) than those shown. Moreover, in some embodiments, the front cover **102** need not necessarily match the size and shape of the perimeter of the back cover **104**.

In one example, the panels **202** which collectively define the perimeter of the front cover **102** comprise rigid or semi-rigid sheets of material. As used herein, a sheet of material is rigid or semi-rigid if it substantially holds its shape and resists deformation by its own weight when held by its edge. One specific example of a rigid or semi-rigid material that may be used is a 0.3 millimeter thick sheet of polycarbonate or polypropylene. However, numerous other materials and thicknesses may alternatively be used as described further below. The back cover **104** may be made of one or more rigid or semi-rigid materials. In one specific example, the back cover may be molded of polycarbonate acrylonitrile butadiene styrene (PCABS). In some embodiments, the back cover **104** may additionally include portions made from a flexible, elastomeric material (e.g., around at least some edges of the back cover to help retain the electronic device), such as silicone, rubber, or the like.

As best shown in FIG. 2D and FIG. 2E, the free longitudinal edge of the back cover **104** (the edge opposite the flexible hinge **200**) includes a trough or lip **208** to support the electronic device in the cover **100** and prevent it from slipping out.

FIG. 3 depicts the cover **100** with the front cover **102** open and lying substantially coplanar with the back cover **104** to allow an electronic device **300** to be inserted into the receptacle **302** of the back cover **104**. Specifically, the electronic device **300** is placed on top of an inner surface **304** of the front cover **102** and slid down into the back cover **104** between the lateral edges **306** of the back cover **104**. The lateral edges **306** act as guide rails to guide the electronic device **300** for sliding movement parallel to the lateral edges **306** of the back cover **104**. The electronic device **300** is inserted until it reaches and abuts the lip **208** along the longitudinal edge of the back cover **104**. The lip **208** limits movement of the electronic device **300** past the lip **208**, and prevents the electronic device **300** from inadvertently sliding out of the cover **100**. In this example, the receptacle **302** is bounded on four sides by the lip **208**, the lateral edges **306**, and the inner surface of the back cover **104**, which collectively hold the electronic device **300** in the receptacle **302**. The receptacle **302** is open on an edge opposite the

5

lip 208 to allow the electronic device 300 to slide in that direction. However, in other examples, the receptacle may be configured in other arrangements capable of receiving and holding an electronic device. In still other examples, the receptacle may be omitted (e.g., in the case of a flat back cover and/or in the case of a cover flap that couples to the electronic device without a back cover).

In some embodiments, raised skid pads or “slides” 308 may also be disposed in the receptacle 302, on an inner surface of the back cover 104 to further aid in the sliding movement of the electronic device 300 in the receptacle 302. The slides 308 may be raised a small distance (e.g., 0.3 millimeters) relative to the inner surface of the back cover 104. The slides 308 may be made of a material having a coefficient of friction (static and/or kinetic) relative to the electronic device 300 lower than a coefficient of friction of other portions of the back cover 104 relative to the electronic device. For example, the slides 308 may be made of Polytetrafluoroethylene (PTFE), Teflon, nylon, ultra high molecular weight polyethylene (PE), smooth or polished metal, or the like. In other examples, the slides may be made of other materials and may be coated with a material having lower coefficient of friction (static and/or kinetic) than the material being coated, such as soft touch paint, or the like. While the slides 308 are shown as two thin rectangles proximate the lateral edges 306 and a thin rectangle proximate the lip 208 of the back cover 104, in other examples, the slides may be different shapes and/or sizes, the slides may be positioned in other locations, and any number of one or more slides may be used. In still other examples, all or part of the inner surface of the back cover 104 or the receptacle 302 may be made or coated with a low friction material.

FIG. 4 is schematic view of the cover 100 of FIG. 1A and FIG. 1B, showing example locations of elements that may be used to retain an electronic device and/or activate one or more functions of the electronic device. As shown, the cover 100 includes a first retention mechanism comprised of four retention elements 400A, 400B, 400C, and 400D (collectively referred to as “first retention mechanism 400”) disposed in the back cover 104 to hold the electronic device in a first position relative to the back cover 104. The cover 100 also includes a second retention mechanism also comprised of four retention elements 402A, 402B, 402C, and 402D (collectively referred to as “second retention mechanism 402”) disposed in the back cover 104 to hold the electronic device in a second position relative to the back cover 104. In this example, the second position is spaced a distance in the lateral direction from the first position. In some examples, the first retention mechanism 400 and the second retention mechanism 402 may each comprise one or more ferromagnetic elements to at least one of attract, or be attracted by, ferromagnetic elements in the electronic device. As used herein, a ferromagnetic element is an element that is susceptible to magnetization, including permanent magnets and materials (e.g., iron based metals) that are attracted by permanent magnets. For instance, retention elements 400A-D and 402A-D may comprise magnets to attract complimentary magnets or ferrous metal plates located in the electronic device, or vice versa. In some specific examples, each of retention elements 400A, 400B, 402A, and 402B may comprise paired magnets, while each of retention elements 400C, 400D, 402C, and 402D may comprise a pair of paired magnets.

While in this example the first retention mechanism is described as being a first set of ferromagnetic elements and the second retention mechanism is described as being a second set of ferromagnetic elements, in other examples, other retaining means may be used for the first and/or second reten-

6

tion mechanisms. For instance, the first and/or second retention mechanisms may comprise latches that engage the electronic device, or ledges that protrude laterally inward from the top of the lateral edges to retain the electronic device.

In still other examples, a single retention mechanism may be used, which retains the electronic device in both the first and second positions. In one such example, the electronic device may be fixed to a platform in the surface of the back cover, and the platform may be slidable relative to the remainder of the back cover (e.g., on rails) to facilitate movement of the electronic device between the first position and the second position. In this example, the single retention mechanism to couple the electronic device to the platform may comprise one or more ferromagnetic elements, latches, snaps, clamps, or other mechanical fastening means.

By using two ferromagnetic retention mechanisms 400 and 402 spaced a distance apart, such as those shown in FIG. 4, an electronic device may be placed in the cover 100 and retained in, and selectively slid back and forth between, the first and second positions. As noted above, the lateral sides 306 of the back cover act as guide rails to guide the electronic device and the slides 308 reduce friction between the electronic device and the back cover 104 facilitating easy movement between the first and second positions.

In the illustrated example, the back cover 104 also includes one or more activation mechanisms 404A and 404B (collectively referred to as “activation mechanisms 404”). The activation mechanisms 404 may be used to activate one or more functions or operations of an electronic device housed in the cover 100. In one example, the activation mechanisms 404 may comprise magnets to activate Hall effect sensors located in the electronic device. However, in other examples, the activation mechanisms 404 may comprise radio frequency identification (RFID) chips or other mechanism capable of activating an operation of the electronic device.

In one example, the activation mechanism 404A may be detectable by a sensor in the electronic device to signal that the electronic device is housed in the cover 100. In response to detecting that it is in the cover 100, the electronic device 300 may, for example, output information such as a tutorial informing the user how to use the cover 100, marketing information or advertisements, or the like. In another example, in response to detecting that it is in the cover 100, the electronic device 300 may change an audio setting of the electronic device 300. Additional details of this audio setting example are provided below with reference to FIG. 9.

As another example, the activation mechanism 404B may be detectable by a sensor in the electronic device when the electronic device is positioned to align the activation mechanism 404B with the sensor in the electronic device. In response to detecting, by the sensor, the activation mechanism 404B, the electronic device may be configured to activate an application associated with a camera of the electronic device responsive to movement of the electronic device from the first position to the second position. Additional details of this camera activation example are provided below with reference to FIG. 5A and FIG. 5B.

As another example, relative movement between the electronic device and the cover may expose one or more speakers of the electronic device and/or may connect the electronic device with one or more external speakers. In such an example, the activation mechanism 404B may be detectable by a sensor in the electronic device when the electronic device is positioned to align the activation mechanism 404B with the sensor in the electronic device. In response to detecting, by the sensor, the activation mechanism 404B, the electronic device may be configured to change an audio setting of the

electronic device (e.g., adjust a volume of the electronic device, activate an audio signal processing algorithm, etc.).

Additionally or alternatively, in some examples, the front cover **102** may include one or more activation mechanisms **406A**, **404B**, and **406C** (collectively referred to as “activation mechanisms **406**”). Similar to the activation mechanisms **404** in the back cover **104**, the activation mechanisms in the front cover **102** may comprise magnets, RFID chips, or any other mechanism capable of activating an operation of the electronic device.

As discussed above, the front cover **102** comprises a foldable flap made up of multiple substantially planar panels **202**. In some examples, the activation mechanisms **406** may be disposed on different ones of the panels **202**. For instance, in the illustrated example, activation mechanism **406A** is disposed on panel **202D**, activation mechanism **406B** is disposed on panel **202B**, and activation mechanism **406C** is disposed on panel **202C**. In this way, at least some of the activation mechanisms **406** may be moved to activate a corresponding function or operation of the electronic device without moving other activation mechanisms. This arrangement may be used to implement, among other things, a “peek” functionality, in which lifting a first panel (e.g., corner panel **202B**) activates a first operation of the electronic device, while lifting a second panel (e.g., corner panel **202C**) activates a second operation of the electronic device. The “peek” functionality is further described below with reference to FIGS. **6** and **7**.

In various examples, the cover **100** may include shielding to one side of one or more of the activation mechanisms. The shielding may be located in a portion of the cover containing the activation mechanism(s) and/or a portion of the cover that the activation mechanism(s) is proximate to in one or more positions of the cover. For instance, the activation mechanism **406A** in the front cover **102** may be shielded on an outside of the front cover **102** (i.e., a side furthest from the electronic device when the cover is in the closed position of FIG. **10A**) to prevent the activation mechanism **406A** from inadvertently activating a Hall effect sensor in the electronic device when the cover is in the open position (as shown in FIG. **10B**). Additionally or alternatively, the same result may be achieved by placing shielding at a location in an outer surface of the back cover **104** that is aligned with the activation mechanism **406A** when the cover is in the open position (as shown in FIG. **10B**).

The foregoing examples describe embodiments in which the cover includes various activation mechanisms to activate functions or operations of an electronic device. In other examples, one or more of the activation mechanisms may be omitted from the cover and the functions or operations of the electronic device may be activated by one or more other sensors of the electronic device (e.g., a camera or light sensor) that do not depend on an activation mechanism in the cover.

These and additional details of the construction of example covers for electronic devices are further explained below in the description of the operation of such example covers.

Example Use Case (Camera Activation)

As discussed above, in one example, an activation mechanism (e.g., activation mechanism **404B** in FIG. **4**) may be disposed in the cover. When the activation mechanism is aligned with or otherwise moved into proximity of a sensor in an electronic device (e.g., electronic device **300**), the activation mechanism may be detected by the sensor. Detection of the activation mechanism by the sensor may activate an application associated with a camera of the electronic device responsive to movement of the electronic device from a first position, in which the camera of the electronic device is

covered or obstructed by the cover, to a second position, in which the camera is exposed or unobstructed by the cover.

In the first position, the electronic device is fully inserted in the receptacle **302** of the back cover **104** and rests against the lip **208** along the longitudinal edge of the back cover **104**. In this example, the retention mechanisms **400** and **402** are magnetic retention mechanisms, allowing the electronic device to slide from the first position to the second position. However, as noted above, one or more other retention mechanisms may alternatively be used.

FIG. **5A** and FIG. **5B** depict back and front views, respectively, of the cover **100** in with the front cover **102** folded completely back about flexible hinge **200** so that the front cover **102** lies substantially parallel and adjacent to the back cover **104**, thereby exposing the inner surface **304** of the front cover **102**. The electronic device **300** is shown moved a distance “d” in the direction of the arrow to the second position. In the first position, a camera **500** and flash **502** of the electronic device **300** were obstructed by the cover **100**. In other embodiments (not shown), a light sensor may be disposed proximate the camera **500** and flash **502**. In the second position, the camera **500** and flash **502** (and light sensor if included) are exposed and unobstructed by the cover **100**. Further, moving the electronic device **300** to the second position aligns the second activation mechanism **404B** (see FIG. **4**) with a sensor (e.g., Hall effect sensor) in the electronic device, which causes the electronic device to activate an application associated with a camera of the electronic device.

In other examples, the application associated with the camera of the electronic device may be activated in response to one or more other sensors of the electronic device (e.g., a camera or light sensor) detecting that the camera is or becomes exposed or unobstructed by the cover (e.g., when the device is moved from the first position to the second position). In such an example, the electronic device may detect the presence of the cover (e.g., based on detection of an activation mechanism such as activation mechanism **404A**). Then, the electronic device may activate the camera application in response to detecting, by the camera or a light sensor, that the camera is exposed or unobstructed by the cover.

The application associated with the camera may be a camera-specific application (e.g., an application specifically designed to take pictures with the camera), or it may be another application that makes use of the camera **500** (e.g., a text message application, an email application, an optical scanner application, an augmented reality application, etc.). Activation of the application may cause a user interface to be presented on a display **506** of the electronic device **300**. In the illustrated example, the application comprises a camera-specific application and the user interface includes a view finder window **506** displaying the camera field of view, a control window **508** having controls for controlling the camera (e.g., zoom, exposure, picture vs. video, etc.), and a settings window **510** for controlling one or more settings or preferences (e.g., image size, sounds, etc.).

Example Use Case (“Peek”)

FIG. **6** illustrates another example use case, in which lifting a portion (less than all) of a front cover of an electronic device causes activation of a function or operation of the electronic device. For example, lifting a first portion of the front cover **102** uncovers a first portion of the display screen of the electronic device **300** and causes activation of a first operation. In the illustrated embodiment, lifting a left corner of the front cover **102** distal to the flexible hinge **200** uncovers a triangular region **600** of the display screen of the electronic device. Lifting the left corner of the front cover **102** also lifts activation mechanism **406B** away from a corresponding sen-

sor (e.g., Hall effect sensor, RFID chip, etc.) in electronic device, thereby activating a first operation of displaying a date and time on the uncovered portion of the display screen.

Lifting a second portion (again less than all) of the front cover **102** uncovers a second portion of the display screen of the electronic device **300** and causes activation of a second operation. In the illustrated embodiment, lifting a right corner of the front cover **102** distal to the flexible hinge **200** uncovers a triangular region **602** of the display screen of the electronic device. Lifting the right corner of the front cover **102** also lifts activation mechanism **406C** away from a corresponding sensor (e.g., Hall effect sensor, RFID chip, etc.) in electronic device, thereby activating a second operation of displaying weather information on the uncovered portion of the display screen.

While the activation mechanisms **406B** and **406C** are shown located proximate substantially planar panels **202B** and **202C**, respectively, in other embodiments, the activation mechanisms may be located proximate to other substantially planar panels. In one such embodiment, the activation mechanisms **406B** and **406C** may be located proximate substantially planar panels **202D** and **202E**, respectively.

In some embodiments, the portion of the display screen on which information is presented is based on the portion of the front cover **102** that is lifted. That is, by lifting more of the front cover **102**, correspondingly more of the display screen may present information. In embodiments in which the front cover has multiple substantially planar panels **202**, each panel **202** may have an activation mechanism and the portion of the display screen on which information is presented is based on the number of panels (and corresponding activation mechanisms) that are lifted from the display screen. That is, by lifting one panel, a region of the display uncovered by lifting the panel will display information. Each additional panel lifted may “turn on” an additional portion of the display screen uncovered by lifting the respective panel. The information presented on each portion of the display screen corresponding to the panels may be predetermined (i.e., each portion of display screen will always present the same information), may be set by a user, and/or may be determined based on a current mode or state of the device (e.g., asleep, screen off, locked, currently open applications, etc.). In other embodiments, the front cover may include a continuous flexible magnetic sheet. In that case, the portion of the display screen on which information is presented may correspond to the portion of the display screen uncovered by lifting the portion of the front cover.

The information displayed in regions **600** and **602** in FIG. **6** are merely examples. In other embodiments, other information may be presented in response to lifting portions of a cover of an electronic device and/or operations other than presenting information may be performed in response to lifting portions of the cover. By way of example and not limitation, other information that may be presented in response to lifting a portion of a cover include calendar information (e.g., a calendar, appointments, reminders, etc.), financial information (e.g., stock tickers, account balances, trade announcements, etc.), an email message, a text message, a photograph, an image, audio information (e.g., artist, song title, album cover, etc.), a video, voicemail information, call information, or a menu or interface (e.g., displaying settings and/or controls to change settings of the electronic device). By way of example and not limitation, other operations that may be performed include playing audio content, pausing or stopping audio content, increasing and/or decreasing audio volume, turning off an alarm, sending a call to voicemail, accepting a meeting invitation, or the like.

In some embodiments, lifting both the first and second portions of the front cover **102** concurrently (either simultaneously or sequentially), may cause activation of a third operation. By way of example and not limitation, the third operation may include turning on the display of the electronic device, waking the electronic device, presenting a lock screen of the electronic device, or the like.

FIG. **7** illustrates another example cover **700** that may be used to implement a variation of the peek functionality. In this example, the cover **700** includes a foldable flap **702** having a first portion **702A**, a second portion **702B**, a third portion **702C**, and a fourth portion **702D**. The portions **702A-702D** of the foldable flap **702** comprise substantially planar panels. Each of the portions **702A-702D** is foldably coupled to two of the other portions by respective flap hinges. A first activation mechanism **706** is disposed in the third portion **702C** of the foldable flap **702**, and a second activation mechanism **708** is disposed in the second portion **702B** of the foldable flap **702**. In this embodiment, lifting a first corner **710** of the foldable flap **702** results in both the third portion **702C** and **702D** being lifted and removes activation mechanism **706** from a corresponding sensor (e.g., Hall effect sensor, RFID reader, etc.) in the electronic device and, thereby, activates a first operation of the electronic device. Lifting a second corner **712** of the foldable flap **702** results in both the first portion **702A** and the second portion **702B** (and hence the second activation mechanism **708**) being lifted, thereby activating a second operation of the electronic device. In some examples, the flap hinges **704** may comprise directional hinges (as described in detail with reference to FIGS. **13A-13C** and **14A-14C**). In such examples, continued lifting of either the first corner **710** or the second corner **712** will cause the directional flap hinges **704** to bind, thereby lifting the remaining portions of the foldable flap away from the display of the electronic device.

The electronic device may activate a third operation in response to detecting the lifting of both the first activation mechanism **706** and the second activation mechanism **708** concurrently. Alternatively, the electronic device may activate the third operation in response to detecting the lifting of the first portion **702A** of the foldable cover **702** by a front facing camera or light sensor **714** of the electronic device. In other examples, the electronic device may detect lifting of other portions (e.g., portions **702B-702D**) of the foldable cover **702** using one or more front facing cameras and/or light sensors instead of or in addition to the Hall effect sensors or RFID readers described above.

While the foregoing examples describe activating an operation of an electronic device in response to “peeking” under a front cover, in other embodiments, an operation of an electronic device may be activated in response to “peeking” under a back cover. For instance, in one example, a cover may include a back cover that may be folded or otherwise moved to peek under the cover and reveal a rear facing camera of the electronic device. In response to peeking under the cover to reveal the rear facing camera, the electronic device may activate an application associated with the rear facing camera of the electronic device.

Example Electronic Device

FIG. **8** is a block diagram illustrating the example electronic device **300** in more detail. By way of example and not limitation, electronic device **300** may be configured as an electronic book reader device, tablet computer, mobile device, portable gaming device, electronic picture frame, display screen, or the like. As shown in FIG. **8**, the electronic device **300** includes one or more processors **800** communicatively coupled to one or more sensors **802**, one or more cameras **804**, a display **806**, one or more audio interfaces **808**,

11

and memory **810**. The electronic device **300** may also include one or more ferromagnetic elements **812** (e.g., magnets or ferrous metal pieces) disposed in the electronic device to at least one of attract, or be attracted by, ferromagnetic elements in a cover (e.g., elements **400A-400D**, **402A-402D**, **1204**, **1206**, **1210**, **1212**, **1214**, and/or **1216**).

The sensors **802** may include one or more Hall effect sensors, RFID readers, or other sensors to detect the presence and/or motion of one or more activation mechanisms in one or more accessory devices (e.g., activation mechanisms **404** and **406** in cover **100**). The sensors **802** may also include one or more other sensors, such as light sensors, accelerometers, touch sensors, transceivers (e.g., WiFi, Bluetooth, near field communication, etc.), navigation sensors (e.g., compass, global positioning satellite system, etc.), or the like. Further, though they are shown as separate blocks in this figure, the camera(s) **804** and audio interface(s) **808** of the electronic device are also examples of sensors of the electronic device.

The camera(s) **804** may include the rear facing camera **500** and associated flash shown in FIG. **5A** and/or the front facing camera **714** on the front of the electronic device **300**.

The display **806** may comprise, for example, a liquid crystal display (LCD), a light emitting diode display (LED), a plasma display, an electronic ink (e-ink) display, a cathode ray tube (CRT) display, a combination of any of the foregoing, or other display technologies. In some examples, the display **806** may comprise a touch screen display capable of receiving input by touching the screen with a finger, hand, thumb, stylus, or other pointing device.

The audio interface(s) **808** may include one or more audio inputs (e.g., microphones, audio-in jacks, etc.) and/or one or more audio outputs (e.g., speakers, headphone jack, etc.).

Memory **810** may include a plurality of modules to implement various operations responsive to relative movement of the electronic device **300** and a cover. For instance, the memory **810** may include a camera module **814** that controls operation of the camera(s) **804** and provides a user interface for the user to interact with and control the camera(s) **804**. The camera module **814** may be activated or launched by opening an application or selecting an icon or other control corresponding to the camera module **814**. Additionally or alternatively, the camera module **814** may be activated in response to detection, by one of the sensors **802**, of movement of the electronic device **300** relative to a cover **100**. The camera module **814** may comprise a native module provided by a manufacturer of the device, or it may comprise an application or module developed by a third party developer. Additionally, the camera module **814** may be a camera-specific module dedicated to controlling operation of the camera(s) **804**, or it may be another application configured to make use of the camera(s) **804** (e.g., a text messaging application, an email application, an optical scanner application, an augmented reality application, etc.). In the event that the camera module **814** has not previously been activated by movement of the cover relative to the electronic device **300**, the camera module **814** may cause instructions to be output for presentation on the display **806** of the electronic device **300**. Depending on a mode of the electronic device **300** at a time when the sensor(s) **802** detect the movement of the cover **100**, the camera module **814** may control access to other functions of the electronic device **300** (e.g., limit access to content, location, personal information, etc.).

The memory **810** also includes a peek module **816**, which may be configured to implement various operations in response to movement of a portion (less than all) of a cover covering the display **806** of the electronic device **300**. For instance, the peek module **816** may activate a first operation in

12

response to detecting, by a first of the sensor(s) **802**, movement of a first portion (e.g., a corner of front cover **102**) relative to the electronic device. The peek module **816** may activate a second operation, different than the first operation, in response to detecting, by a second of the sensor(s) **802**, movement of a second portion (e.g., a different corner of front cover **102**) relative to the electronic device. The first and second operations activated by the peek module **816** may be any of those discussed above in the discussion of the “Peek” use case. In some examples, the peek module **816** may simply provide an interface to present and/or repackage information from one or more other modules **820** (e.g., a clock module, weather module, calendar module, text message module, email module, phone module, media player **818**, etc.) and/or content sources **822**. In one specific example, the peek module **816** may activate a media player **818** of the electronic device **300** to begin playing audio content. Additionally or alternatively the peek module **816** may activate the media player to display content (e.g., artist and/or song title, album cover, video content, etc.) in a portion of the display **806** of the electronic device **300** uncovered by lifting the portion of the front cover **102**. In other examples, the peek module **816** may itself perform the operations activated (e.g., the peek module **816** may contain a clock, weather application, calendar, media player, etc.). In response to detection of movement of both the first and second portions concurrently, the peek module **816** may be configured to perform a third operation such as any of those discussed above in the discussion of the “Peek” use case.

Memory **810** is shown to include software functionality configured as one or more applications or “modules.” However, the modules are intended to represent example divisions of the software for purposes of discussion, and are not intended to represent any type of requirement or required method, manner or necessary organization. Accordingly, while various “modules” are discussed, their functionality and/or similar functionality could be arranged differently (e.g., combined into a fewer number of modules, broken into a larger number of modules, etc.).

The modules may include instructions executable by the one or more processors **800** to implement the functionalities they are described as performing. The electronic device **300** may additionally or alternatively include one or more hardware components (e.g., application specific integrated circuits, field programmable gate arrays, systems on a chip, and the like) to implement some or all of the functionalities the modules are described as performing.

The memory **810** described herein is an example of computer-readable media and may take the form of volatile memory, such as random access memory (RAM) and/or non-volatile memory, such as read only memory (ROM) or flash RAM. Computer-readable media includes volatile and non-volatile, removable and non-removable media implemented in any method or technology for storage of information such as computer-readable instructions, data structures, program modules, or other data for execution by one or more processors of a computing device. Examples of computer-readable media include, but are not limited to, phase change memory (PRAM), static random-access memory (SRAM), dynamic random-access memory (DRAM), other types of random access memory (RAM), read-only memory (ROM), electrically erasable programmable read-only memory (EEPROM), flash memory or other memory technology, compact disk read-only memory (CD-ROM), digital versatile disks (DVD) or other optical storage, magnetic cassettes, magnetic tape, magnetic disk storage or other magnetic storage devices, or any other non-transmission medium that can be used to store

13

information for access by a computing device. As defined herein, computer-readable media does not include transitory media, such as modulated data signals and carrier waves.

Example Methods of Operation

FIG. 9 is a flowchart illustrating an example method 900 of activating an operation or function of an electronic device responsive to motion of the electronic device relative to a cover. The example method 900 is described with reference to electronic device 300 and cover 100 for ease of understanding. However, the method 900 is not limited to use with electronic device 300 and cover 100.

The method 900 includes, at block 902, detecting, by the electronic device 300, the presence of the cover 100. As discussed above, the electronic device 300 may detect the presence of the cover 100 using a sensor, such as a Hall effect sensor, RFID reader, or the like to detect an activation mechanism (e.g., magnet, RFID chip, or the like) in the cover 100. For instance, when the electronic device 300 is placed in the receptacle 302 of the cover 100 (or when it is turned on if it is off when placed in the cover), the electronic device may detect the presence of the activation mechanism 404A in the back cover 104 of the cover 100.

At block 904, the electronic device 300 may activate one or more operations in response to detecting the presence of the cover. For example, if the electronic device 300 has not previously been placed in the cover 100 (or another cover), the electronic device 300 may launch a tutorial or otherwise output instructions describing the features of the cover and/or how the cover works with the electronic device. Outputting the instructions may comprise presenting text and/or video on the display 806 of the electronic device 300 and/or outputting audio instructions from one or more speakers or other audio interfaces 808 of the electronic device 300. For purpose of this disclosure, the electronic device 300 may determine that it has not previously been placed in a cover if this is the very first time the electronic device has been placed in a cover, if this is the first time the electronic device has been placed in a cover by a particular user (e.g., following a deregistration by one user and a registration by a new user), if this is the first time the electronic device has been placed in a cover following a factory reset, or if this is the first time the electronic device has been placed in a cover following another resetting event that indicates a likelihood that the tutorial or instructions may be desired by a user.

As another example, in response to detecting presence of the cover 100, the electronic device 300 may, at block 904, change an audio setting of the electronic device. That is, the electronic device 300 may change an audio setting to account for or take advantage of the fact that the electronic device 300 is placed in the cover 100. Examples of audio settings that may be changed include, for example, volume, stereo vs. mono, frequency response, audio signal processing algorithms (e.g., Dolby, surround sound, etc.). In one specific example, the electronic device 300 may adjust a volume level to maintain a same perceived volume to a user when in the cover 100 as without the cover 100. In an additional or alternative example, the electronic device 300 may adjust a frequency response of the electronic device 300 to maintain a same perceived sound characteristic to a user when in the cover 100 as without the cover 100. In an additional or alternative example, the electronic device 300 may implement a Dolby audio signal processing algorithm responsive to detecting the presence of the cover 100. Activation of the one or more operations may be performed in response solely to detection of presence of the cover, or in response to detection of presence of the cover along with one or more other factors

14

(e.g., orientation of the device, user preferences, mode of the device, applications running, etc.).

At block 906, the electronic device 300 may detect movement of the cover 100 relative to the electronic device 300. For example, the electronic device 300 may detect sliding movement of the electronic device 300 relative to the back cover 104 from the first position to the second position shown in FIG. 5A and FIG. 5B. As another example, the electronic device 300 may detect lifting of a portion of the front cover 102 from the display of the electronic device 300.

At block 908, the electronic device 300 may determine an operation to activate. The operation to activate may depend upon the sensor(s) of that detected the movement. For instance, if a sensor of the electronic device 300 detects the presence of the activation mechanism 404B, the electronic device 300 may determine to activate the camera module 814, since detection of the activation mechanism 404B denotes the sliding movement of the electronic device 300 to expose the camera 500 of the electronic device 300. If, on the other hand, if a sensor of the electronic device 300 detects lifting of activation mechanism 406B, the electronic device 300 may determine to activate the peek module 816 to perform a first operation (e.g., displaying a date and time, playing audio content, increasing a volume, etc.). Further, if a sensor of the electronic device 300 detects lifting of activation mechanism 406C, the electronic device 300 may determine to activate the peek module 816 to perform a second, different operation (e.g., displaying weather information, stopping or pausing audio content, decreasing a volume, etc.). Still further, if sensors of the electronic device 300 detect lifting of activation mechanisms 406B and 406C concurrently, the electronic device 300 may determine to activate yet another operation (e.g., waking the electronic device 300). In embodiments in which the electronic device 300 includes additional sensors and/or the cover includes additional activation mechanisms, the electronic device 300 may determine to activate the same or different operations in response to detecting such activation mechanisms by such sensors.

Once the electronic device 300 determines an operation to activate, at block 910, the electronic device 300 determines whether or not the particular operation has been activated before (or whether it has been activated in the same way before). For instance, if the electronic device 300 determines that the camera module 814 has not previously been activated by movement of the cover 100 relative to the sensor 404B, the electronic device 300 may, at block 912, cause a tutorial or instructions for use to be output for presentation on the display 806 of the electronic device 300. Again, outputting the instructions may comprise presenting text and/or video on the display 806 of the electronic device 300 and/or outputting audio instructions from one or more speakers or other audio interface(s) 808 of the electronic device 300.

If the determined operation has previously been performed, or after outputting the instructions, the electronic device 300 may, at block 914, determine a current mode of the electronic device 300 at a time when the sensor detects the movement of the cover 100. The electronic device may determine, at block 916, whether to control access to other functions of the electronic device 300 based at least in part on the mode of the electronic device 300 at the time when the sensor detects the movement of the cover 100. At block 918, the electronic device 300 activates the determined operation taking into account any access restrictions determined at block 916. For instance, if the electronic device 300 determines that the display 806 is locked when a sensor detects the camera activation mechanism 404B, the electronic device 300 may limit access of the camera module 814 to only those pictures

15

taken during the current photography session. As another example, if the display **806** is locked when a sensor detects one of the peek activation mechanisms **406B** or **406C**, the electronic device may cause the peek module **816** to present only non-personal information and/or may prevent the peek module **816** from accessing personal information (e.g., location information). As yet another example, if the electronic device **300** is running an application that makes use of the camera (e.g., a text messaging application) when a sensor detects the camera activation mechanism **404B**, the electronic device may persist the currently running application rather than activating the camera module **814**. That is, the electronic device **300** may refrain from launching a camera-specific application if another application that makes use of the camera(s) **804** is already open. Activation of the one or more operations responsive to relative movement of the electronic device and the cover may be further based at least in part one or more other factors (e.g., orientation of the device, user preferences, mode of the device, applications running, etc.).

The flow of operations illustrated in FIG. 9 is illustrated as collections of blocks and/or arrows representing sequences of operations that can be implemented in hardware, software, firmware, or a combination thereof. The order in which the blocks are described is not intended to be construed as a limitation, and any number of the described operations can be combined in any order to implement one or more methods, or alternate methods. Additionally, individual operations may be omitted from the flow of operations without departing from the spirit and scope of the subject matter described herein. In the context of software, the blocks represent computer-readable instructions that, when executed by one or more processors, perform the recited operations. In the context of hardware, the blocks may represent one or more circuits (e.g., application specific integrated circuits—ASICs) configured to perform the recited operations.

Example Folding Configurations

FIGS. 10A-10C illustrate three different positions into which the cover **100** is movable. Specifically, FIG. 10A, FIG. 10B, and FIG. 10C illustrate a closed position, an open position, and a stand position, respectively, into which the cover **100** is movable. In this example, the front cover **102** comprises a foldable flap comprising multiple substantially planar panels coupled together by flap hinges.

In the closed position, shown in FIG. 10A, the front cover **102** is substantially planar and covers an opening of the receptacle of the back cover **104**. This is the position in which the electronic device **300** would likely be stored during periods of non-use.

In the open position, shown in FIG. 10B, front cover **102** folded 180 degrees about the back cover **104** via flexible hinge **200**, such that the front cover **102** is substantially planar and lies substantially parallel and adjacent to an outer surface of the back cover **104**. This is the position in which the cover **100** would likely be when the user is holding the electronic device **300** and/or when the electronic device **300** is laid flat on a table, lap, or other support surface.

In the stand position, shown in FIG. 10C, the front cover **102** folds to form a stand to support the back cover (and an electronic device supported thereby) at an angle θ relative to a support surface on which the cover is placed. This is the position in which the cover **100** would likely be when the user is watching a movie or reading a book while sitting in front of a table or other support surface.

Generally, the angle θ may be any angle usable to prop an object for viewing, reading, or other use. In most embodiments, the angle θ may be at least about 30 degrees and at most about 75 degrees relative to the support surface. In some

16

embodiments, the angle θ may be at least about 45 degrees and at most about 65 degrees. In the specific embodiment shown in FIG. 10C, the angle θ is shown to be about 52 degrees relative to the support surface.

The angle θ may vary depending on an angle at which the object is desired to be propped. The geometry of the substantially planar panels **202** and the flexible hinges **204** and **206** may be tailored to achieve the desired angle θ in the stand position. Further, the angle θ may be varied during use by adjusting placement of the portions of the front cover **102** that contact the support surface (as described further with respect to FIGS. 11A and 11B).

When an electronic device has speakers located at or near a top of the electronic device, as shown schematically at **1002A**, and spaced a distance from the back surface **104** of the cover **100**, sound emitted from the speakers is reflected back toward the user as shown by dashed line **1004A**. Specifically, back surface **104** reflects and amplifies the sound to the user to be greater than if the user were listening to the electronic device without a cover. When an electronic device has speakers located on a back surface of the electronic device, as shown schematically at **1002B**, and the cover **100** has speaker ports as shown at **1006**, sound emitted from the speakers passes through the speaker ports **1006** in the cover **100** and is reflected back toward the user as shown by dashed line **1004B**. Specifically, the folded front cover **102** reflects and amplifies the sound to the user to be greater than if the user were listening to the electronic device without a cover. FIG. 10C shows sound emitted at two different locations, namely speakers **1002A** and **1002B**, in practice electronic devices may have speakers at only location **1002A** (in which case speaker ports **1006** may be omitted), only location **1002B**, or both locations **1002A** and **1002B**. Use of the cover **100** in the stand position with electronic devices having speakers at locations **1002A** and/or **1002B** may increase the sound output at a viewing location in front of the electronic device by as much as 10 decibels (dB) at certain frequencies.

FIG. 11A, FIG. 11B, and FIG. 11C illustrate three different orientations in which the cover **100** is configured to support an electronic device when the cover is in the stand position. FIG. 11A illustrates an electronic device supported by the cover **100** in a standard landscape orientation. This figure is a perspective view of the cover **100** in the same position shown in FIG. 10C. In this orientation, the folded front cover **102** contacts the support surface at substantially the locations **1100A** shown in dashed lines. In this orientation, the weight of the electronic device presses generally downward. Due to the centrally located and inwardly sloping surfaces of the front cover **102** at the contact points **1100A** with the ground, the weight distribution of the electronic device tends to press the outer lateral edges of the front cover **102** inward, toward the folded position, as shown by the arrows in FIG. 11A. This inward force increases the stability of the cover in this orientation.

FIG. 11B illustrates an electronic device supported by the cover **100** in an inverted or flipped landscape orientation. In this orientation, outside lateral edges of the front cover **102** contact the support surface at dashed lines **1100B**. Thus, due to the laterally located and outwardly sloping surfaces of the front cover **102** at the contact points **1100B** with the ground, the weight distribution of the electronic device tends to press the outer lateral edges of the front cover **102** apart, as shown by the arrows in FIG. 11B. Thus, the cover **100** is maintained in the stand position in this orientation by magnets (described in detail with reference to FIG. 12) and by the frictional forces between the cover and the support surface at the contact points **1100B**.

17

FIG. 11C illustrates an electronic device supported by the cover **100** in a portrait orientation. In this orientation, the folded front cover **102** contacts the support surface at substantially the location **1100C** shown in dashed lines. In this orientation, the weight distribution of the electronic device tends to press the outer lateral edges of the front cover **102** inward, toward the folded position, as shown by the arrows in FIG. 11C. This inward force increases the stability of the cover in this orientation.

By pulling apart the outer lateral edges of the front cover **102** in the standard landscape orientation (FIG. 11A) and/or the inverted landscape orientation (FIG. 11B) a user can continuously adjust the stand angle at which the electronic device is propped to any angle between about 35 degrees and about 85 degrees.

Example Cover Construction

In some embodiments, the cover **100** may include multiple different ferromagnetic elements to hold the cover **100** in the various different positions. These magnets may be in addition to or instead of the magnets shown in FIG. 4 to retain the electronic device and/or to activate one or more operations of the electronic device. In some embodiments, one or more magnets may serve dual purposes, i.e., to hold the cover **100** in one position and to activate one or more operations in another position. FIG. 12 is schematic view of cover **100**, showing example locations of ferromagnetic elements that may be used to hold the cover in one or more positions.

In the example of FIG. 12, the cover **100** includes ferromagnetic stand elements **1200** and **1202** disposed in the back cover **104** and positioned to at least one of attract, or be attracted by, ferromagnetic stand elements **1204** and **1206**, respectively, disposed in the foldable flap when the foldable flap is in both the open position and the stand position.

The cover **100** in this example also includes a ferromagnetic stability element **1208** disposed in the back cover **104** and positioned to at least one of attract, or be attracted by, ferromagnetic stability elements **1210** and **1212** disposed in the front cover **102** to hold the front cover **102** substantially planar when in the open position. Specifically, the ferromagnetic stability elements **1210** and **1212** are disposed in the two smallest substantially planar panels **202D** and **202E** located in the longitudinal center of the front cover **102** and distal from the flexible hinge **200**. Because of its foldable nature, the front cover **102** tends to be unstable (e.g., floppy). The stability elements **1210** and **1212** in the front cover **102** are at least one of attracted to, or by, the stability element **1208** disposed in the back cover **104**, thereby stabilizing and securing the front cover **102** flat against the back cover in the open position. In the stand position, the ferromagnetic stability elements **1210** and **1212** disposed in the foldable flap **102** are positioned to at least one of attract, or be attracted by, each other to hold the panels **202D** and **202E** together (as best shown in FIG. 11A). Each of the ferromagnetic stand elements **1200**, **1202**, **1204**, and **1206**, and each of the ferromagnetic stability elements **1208**, **1210**, and **1212** may comprise one or more magnets and/or pieces of ferrous metal. Moreover, the size, shape, and position of each of these elements shown in the figures are merely examples and may be different in other embodiments.

The ferromagnetic stand elements **1200**, **1202**, **1204** and **1206** may be magnetically shielded on an inner side so as not to expose the electronic device to magnetic fields when the cover **100** is in the closed position. Similarly, the ferromagnetic stability elements **1210** and **1212** may be shielded on the inner side of the front cover **102** (i.e., the side closest to the electronic device in the closed position).

18

In addition to the ferromagnetic stability elements **1210** and **1212**, the cover **100** may include other features to maintain the cover **100** in the stand position. For example, the cover **100** may include rubber or non-slip materials disposed at one or more locations (e.g., corners, edges, sides, and or surfaces) on the front cover **102** and/or the back cover **104** to increase friction between the cover and the support surface.

In some implementations, the cover **100** may additionally include ferromagnetic flap elements **1214** and **1216** to at least one of attract, or be attracted by, ferromagnetic flap elements in the electronic device to hold the front cover **102** in the closed position.

As discussed above, the cover **100** includes several features to aid users in correctly folding the front cover **102** into the stand position. FIGS. 13A-13C illustrate features of the cover **100** that prevent the cover **100** from being folded incorrectly. For example, FIG. 13A illustrates that the directional flap hinge **204** between panels **202B** and **202D** bind, preventing further folding in that direction. FIG. 13B illustrates that the directional flap hinge **204** between panels **202A** and **202C** bind, preventing further folding in that direction. FIG. 13C illustrates that because the ferromagnetic stability elements **1210** and **1212** are shielded on the inner side of the front cover **102** (i.e., the side closest to the electronic device in the closed position), the panels **202D** and **202E** are prevented from sticking together incorrectly (inside-to-inside).

FIGS. 14A-C illustrate details of an example construction of the front cover **102** and the directional flap hinges **204**. FIG. 14A is a partial cross sectional view of the front cover **102**. As shown in FIG. 14A, the front cover **102** includes the substantially planar panels **202** interposed between a flexible outer surface **1402** and a flexible inner surface **1404**. The flexible outer surface **1402** and a flexible inner surface **1404** may be secured to the substantially planar panels **202** by adhesive **1406**, sonic welding, stitching, or any other suitable attachment means.

The front cover **102** has a central plane bisecting the substantially planar panels **202** when the front cover **102** is in a position parallel with the back cover **104** (e.g., when the cover **100** is in the open or closed positions). The directional hinges **204** comprise the flexible inner surface **1402** and the flexible outer surface **1404** at gaps between adjacent ones of the substantially planar panels **202**. In these gaps, the flexible inner surface **1402** and the flexible outer surface **1404** come together and are disposed on a same side of the central plane **1408** (shown below in FIG. 14A). The flexible inner surface **1402** and the flexible outer surface **1404** may be bonded (e.g., by adhesive, welding, etc.) or otherwise joined (e.g., stitching, etc.) in the gaps between the substantially planar panels **202**. In some embodiments (not shown), one or more layers of foam, padding, rubber, or other material may additionally be disposed between the flexible inner surface **1402** and the panels **202** and/or between the flexible outer surface **1404** and the panels **202**.

The flexible inner surface **1402** and the flexible outer surface **1404** may be made of the same or different materials. In one example, the flexible outer surface **1402** is made of leather and the flexible inner surface **1404** is made of a microfiber material. However, in other examples, the flexible inner surface **1402** and/or the flexible outer surface **1404** may be made of polyurethane, ethylene-vinyl acetate, foam rubber, silicone, polyethylene, nylon, microfiber, natural or synthetic cloth, leather, combinations of the foregoing or other flexible materials.

By virtue of the foregoing construction, the directional flap hinges **204** bind and prevent the adjacent panels **202** from folding relative to each other in one direction (clockwise), as

19

shown in FIG. 14B. The directional flap hinges 204 allow adjacent panels 202 to fold relative to each other in a second, opposite direction (counterclockwise), as shown in FIG. 14C. In this way, the directional hinges 204 allow the front cover to fold into the stand position, while preventing the front cover 102 from being folded incorrectly.

FIG. 15 illustrates an example edge construction technique that is usable to join the flexible inner surface 1404 and flexible outer surface 1402 together at a seam around at least a portion of the periphery of the front cover 102. Using this technique, a low profile seam or flange can be formed extending at most 0.5 millimeters beyond an outer periphery of the substantially planar panels 202. This technique is accomplished by applying adhesive 1502 in a bead around the outer periphery of the substantially planar panels 202 before the flexible inner surface 1404 and flexible outer surface 1402 are pressed together. Subsequently, the outer periphery of the front cover 102 may be trimmed and additional adhesive 1504 may be applied to the outer perimeter. Additionally or alternatively, a coating of edge paint 1506 may be applied to the outer perimeter of the front cover 102 to further seal the seam or flange. This technique achieves a low profile seam or flange that extends far less than existing covers having flexible inner and outer surfaces bonded around a core.

CONCLUSION

While various examples and embodiments are described individually herein, the examples and embodiments may be combined, rearranged and modified to arrive at other variations within the scope of this disclosure. For instance, an example cover according to this disclosure may include the features illustrated in FIGS. 4 and 12.

Although the subject matter has been described in language specific to structural features and/or methodological acts, it is to be understood that the subject matter defined in the appended claims is not necessarily limited to the specific features or acts described. Rather, the specific features and acts are disclosed as illustrative forms of implementing the claims.

What is claimed is:

1. A cover for an electronic device, the cover comprising:
 - a back cover including a tray having a receptacle in a front of the tray sized to receive the electronic device and having one or more retention mechanisms to retain the electronic device in the tray; and
 - a front cover comprising a foldable flap coupled to the tray along at least a portion of an edge of the tray by a flexible hinge, the foldable flap comprising:
 - a flexible outer surface;
 - a flexible inner surface;
 - multiple substantially planar panels interposed between the flexible outer surface and the flexible inner surface, a central plane bisecting the substantially planar panels when the foldable flap is in a position parallel with the back cover; and
 - multiple flap hinges, each flap hinge foldably coupling one panel of the multiple substantially planar panels to one other panel of the multiple substantially planar panels, wherein at least one flap hinge of the multiple flap hinges comprises a directional hinge, the directional hinge comprising the flexible inner surface and the flexible outer surface at a gap between adjacent panels foldably coupled by the respective directional hinge, in which the flexible inner surface and the flexible outer surface are disposed on a same side of the central

20

plane such that the directional hinge allows panels foldably coupled by the directional hinge to fold relative to each other in a first direction and limits the panels coupled by the directional hinge from folding relative to each other in a second direction opposite the first direction.

2. The cover of claim 1, further comprising one or more ferromagnetic stand elements disposed in the tray and positioned to at least one of attract, or be attracted by, one or more ferromagnetic stand elements disposed in the foldable flap when the foldable flap is in both an open position and a stand position.

3. The cover of claim 2, further comprising one or more ferromagnetic stability elements disposed in the tray and positioned to attract, or be attracted by, one or more ferromagnetic stability elements disposed in the foldable flap to hold the foldable flap substantially planar when the foldable flap is in the open position,

wherein the one or more ferromagnetic stability elements disposed in the foldable flap are positioned to attract, or be attracted by, each other when the foldable flap is in the stand position.

4. A cover for an electronic device, the cover comprising:
 - a foldable flap configured to be coupled to the electronic device and to selectively cover a display of the electronic device, the foldable flap comprising:
 - multiple substantially planar panels; and
 - multiple flap hinges, each flap hinge foldably coupling one panel of the multiple substantially planar panels to one other panel of the multiple substantially planar panels,

wherein at least one flap hinge of the multiple flap hinges comprises a directional hinge, the directional hinge allowing panels foldably coupled by the directional hinge to fold relative to each other in a first direction and limits the panels coupled by the directional hinge from folding relative to each other in a second direction opposite the first direction.

5. The cover of claim 4, wherein the foldable flap comprises:

- a flexible outer surface;
- a flexible inner surface, and
- wherein the multiple substantially planar panels are interposed between the flexible inner surface and the flexible outer surface.

6. The cover of claim 5, wherein:

the foldable flap has a central plane bisecting the substantially planar panels when the foldable flap is in a substantially planar condition, and

the directional hinges comprise the flexible inner surface and the flexible outer surface at gaps between adjacent ones of the substantially planar panels, in which the flexible inner surface and the flexible outer surface are disposed on a same side of the central plane.

7. The cover of claim 5, wherein the flexible outer surface and the flexible inner surface are joined together at a seam around at least a portion of the periphery of the foldable flap, wherein the seam extends at most 0.5 millimeters beyond an outer periphery of the substantially planar panels.

8. The cover of claim 4, wherein the foldable flap is movable between:

- a closed position, in which the foldable flap is substantially planar and covers the display of the electronic device;
- an open position, in which the foldable flap is substantially planar and lies substantially parallel and adjacent to a back of the electronic device; and

21

a stand position, in which the foldable flap folds to form a stand to support the electronic device at an oblique angle relative to a support surface on which the cover is placed.

9. The cover of claim 8, further comprising one or more ferromagnetic stand elements disposed in the foldable flap and positioned to at least one of attract, or be attracted by, one or more ferromagnetic stand elements disposed in a back of the electronic device or a back cover of the cover when the foldable flap is in both the open position and the stand position.

10. The cover of claim 8, further comprising one or more ferromagnetic stability elements disposed in the foldable flap and positioned to at least one of attract, or be attracted by, one or more ferromagnetic stability elements disposed in the electronic device or a back cover of the cover to hold the foldable flap substantially planar when the foldable flap is in the open position,

wherein the one or more ferromagnetic stability elements disposed in the foldable flap are positioned to at least one of attract, or be attracted by, each other when the foldable flap is in the stand position.

11. The cover of claim 4, further comprising a plurality of retention magnets disposed in the foldable flap, at least some of the plurality of magnets being magnetically shielded on one side.

12. The cover of claim 11, further comprising at least one activation magnet disposed in the foldable flap to activate a sensor in the electronic device, the at least one activation magnet being unshielded on the one side.

13. The cover of claim 4, further comprising a back cover including a tray having a receptacle in a front of the tray sized to receive the electronic device and having one or more retention mechanisms to retain the electronic device in the tray, the foldable flap being coupled to the back cover along at least part of one edge of the tray by a flexible hinge.

14. The cover of claim 13, further comprising a magnet disposed in the back cover to activate a sensor in the electronic device.

15. The cover of claim 4, wherein:

the foldable flap is foldable to a stand position to support the electronic device at an oblique angle relative to a support surface on which the cover is placed, and the foldable flap is configured in the stand position to reflect sound emitted from a back of the electronic device toward a front of the electronic device.

16. The cover of claim 1, wherein the directional hinge limits the panels coupled by the directional hinge from folding relative to each other in a second direction by binding the panels to prevent them from folding relative to each other in the second direction.

17. A cover for an electronic device, the cover comprising: a foldable flap configured to be coupled to the electronic device, wherein the foldable flap is movable between:

a closed position, in which the foldable flap is substantially planar and covers a display of the electronic device;

an open position, in which the foldable flap is substantially planar and lies substantially parallel and adjacent to a back surface of the electronic device; and

a stand position, in which the foldable flap folds to form a stand to support the electronic device at an oblique angle relative to a support surface on which the cover is placed, and

one or more ferromagnetic stand elements disposed in the foldable flap to at least one of attract, or be attracted by, one or more ferromagnetic stand elements disposed in

22

the electronic device or a back cover of the cover when the foldable flap is in both the open position and the stand position.

18. The cover of claim 17, wherein the foldable flap comprises:

multiple substantially planar panels; and

multiple flap hinges, each flap hinge foldably coupling one panel of the multiple substantially planar panels to one other panel of the multiple substantially planar panels,

wherein at least one flap hinge of the multiple flap hinges comprises a directional hinge, the directional hinge allowing panels foldably coupled by the directional hinge to fold relative to each other in a first direction and limits the panels coupled by the directional hinge from folding relative to each other in a second direction opposite the first direction.

19. The cover of claim 17, further comprising one or more ferromagnetic stability elements disposed in the foldable flap and positioned to at least one of attract, or be attracted by, one or more ferromagnetic stability elements disposed in a back of the electronic device or a back cover of the cover to hold the foldable flap substantially planar when the foldable flap is in the open position,

wherein the one or more ferromagnetic stability elements disposed in the foldable flap are positioned to at least one of attract, or be attracted by, each other when the foldable flap is in the stand position.

20. The cover of claim 19, wherein the one or more ferromagnetic stand elements disposed in the foldable flap and the one or more ferromagnetic stability elements disposed in the foldable flap are magnetically shielded on an inner side of the foldable flap, the inner side of the foldable flap being a side closest to the electronic device when the foldable flap is in the closed position.

21. The cover of claim 20, further comprising at least one activation magnet disposed in the foldable flap to activate a sensor in the electronic device, the at least one activation magnet being unshielded on the inner side of the foldable flap.

22. The cover of claim 17, further comprising a back cover including a tray having a receptacle in a front of the tray sized to receive the electronic device and having one or more retention mechanisms to retain the electronic device in the tray, the foldable flap being coupled to the back cover along at least part of one edge of the tray by a flexible hinge.

23. The cover of claim 22, further comprising at least one magnet disposed in the back cover to activate a sensor in the electronic device.

24. A cover for an electronic device, the cover comprising:

a foldable flap comprising one or more ferromagnetic stability elements disposed in the foldable flap, the foldable flap being configured to couple to the electronic device, wherein the foldable flap is movable between:

a closed position, in which the foldable flap is substantially planar and covers a display of the electronic device; and

an open position, in which the foldable flap is substantially planar and lies substantially parallel and adjacent to a back of the electronic device or a back cover of the cover,

wherein the one or more ferromagnetic stability elements disposed in the foldable flap are positioned to at least one of attract, or be attracted by, one or more ferromagnetic stability elements disposed in a back of the electronic device or a back cover of the cover to hold the foldable flap substantially planar when the foldable flap is in the open position.

23

25. The cover of claim **24**, wherein:

the foldable flap is further movable to a stand position, in which the foldable flap folds to form a stand to support the electronic device at an oblique angle relative to a support surface on which the cover is placed, and the one or more ferromagnetic stability elements disposed in the foldable flap are positioned to at least one of attract, or be attracted by, each other when the foldable flap is in the stand position.

26. The cover of claim **24**, further comprising one or more ferromagnetic stand elements disposed in the foldable flap and positioned to at least one of attract, or be attracted by, one or more ferromagnetic stand elements disposed in a back of the electronic device or a back cover of the cover when the foldable flap is in both the open position and the stand position.

27. The cover of claim **26**, wherein the one or more ferromagnetic stand elements disposed in the foldable flap and the one or more ferromagnetic stability elements disposed in the foldable flap are magnetically shielded on an inner side of the foldable flap, the inner side of the foldable flap being a side closest to the electronic device when the foldable flap is in the closed position.

28. The cover of claim **27**, further comprising at least one activation magnet disposed in the foldable flap to activate a

24

sensor in the electronic device, the at least one activation magnet being unshielded on the inner side of the foldable flap.

29. The cover of claim **24**, further comprising a back cover including a tray having a receptacle in a front of the tray sized to receive the electronic device and having one or more retention mechanisms to retain the electronic device in the tray, the foldable flap being coupled to the back cover along at least part of one edge of the tray by a flexible hinge.

30. The cover of claim **29**, further comprising at least one magnet disposed in the back cover to activate a sensor in the electronic device.

31. The cover of claim **24**, wherein the foldable flap comprises:

multiple substantially planar panels; and

multiple flap hinges, each flap hinge foldably coupling one panel of the multiple substantially planar panels to one other panel of the multiple substantially planar panels, wherein at least one flap hinge of the multiple flap hinges comprises a directional hinge, the directional hinge allowing panels foldably coupled by the directional hinge to fold relative to each other in a first direction and limits the panels coupled by the directional hinge from folding relative to each other in a second direction opposite the first direction.

* * * * *